

MICHIGAN

471 708-00
471 718-00

Montážny návod

NOTICE DE
MONTAGE

ASSEMBLY
INSTRUCTIONS

MONTAGEANLEITUNG

INSTRUCCIONES
DE MONTAJE


MONTAGEVOORSCHRIFT

ISTRUZIONI DI
MONTAGGIO


INSTRUÇÕES
DE MONTAGEM

INSTRUKCJA
MONTAŻU

NAPUTCI ZA
MONTAŽU


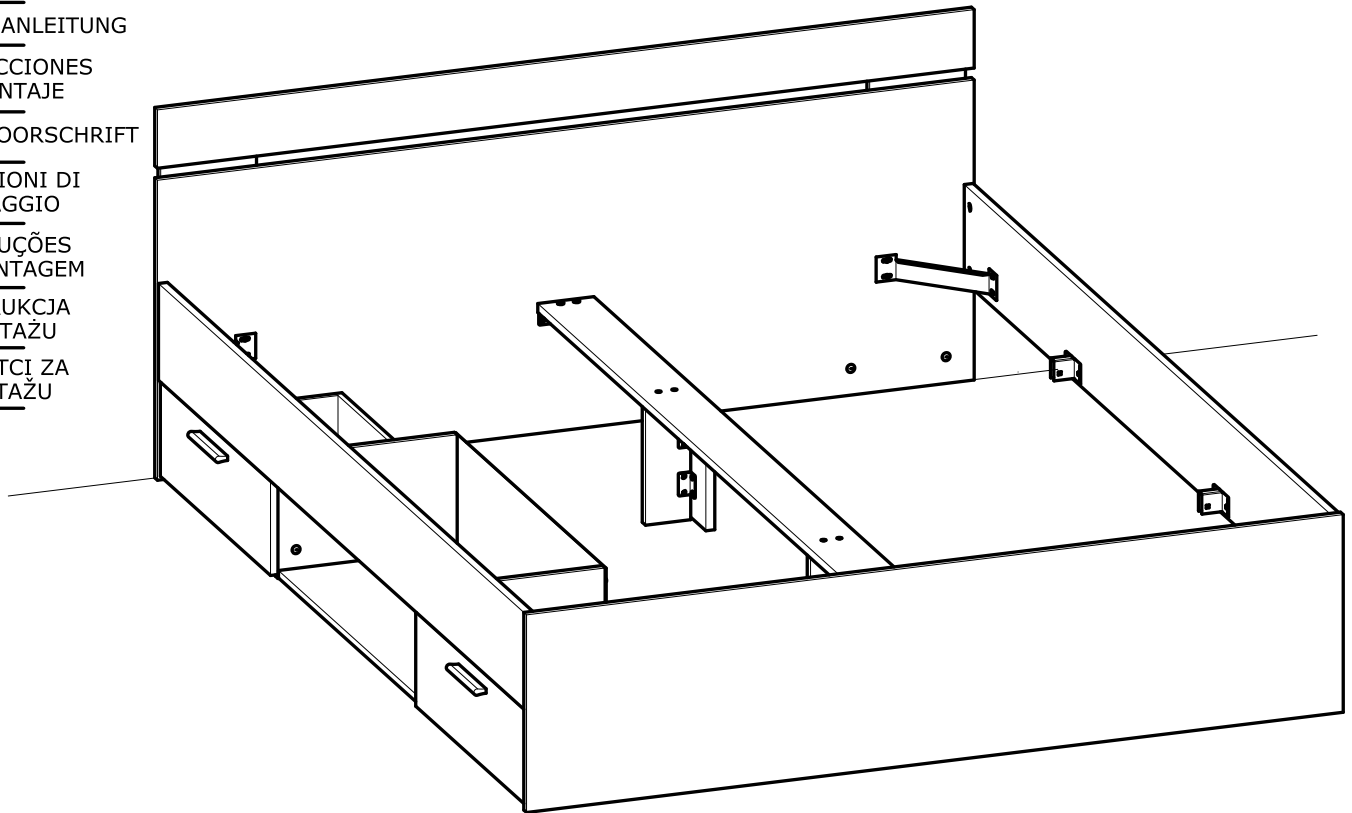


Uchovajte si tento návod, ak by ste ho v budúcnosti potrebovali.
Počas montáže si dávajte pozor, hrozí riziko naštípenia.
Uchovávajte produkt ďalej od tepelného zdroja.
Neskáčte po posteli. Uskladnite posteľ na suchom mieste.

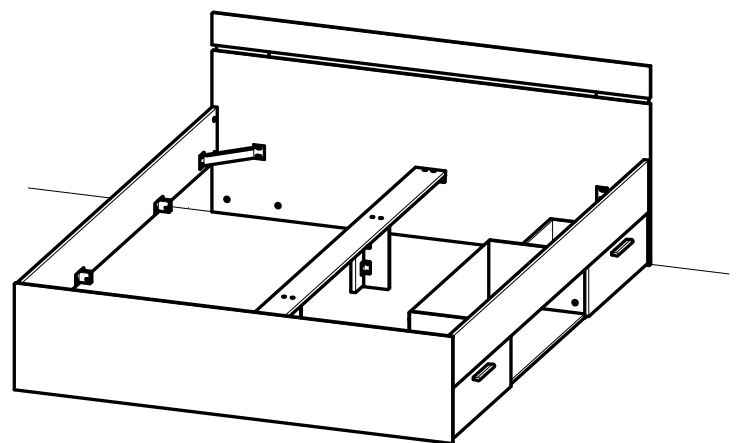


English:














Retain the instructions for future reference.
During the assembly, beware the risks
of pinching and shearing.
Keep the product away from heat sources.
Do not sit on the bed several.
Do not jump on the bed.
Store the bed in a dry place.

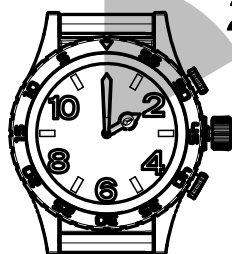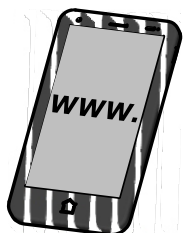

2hoo.

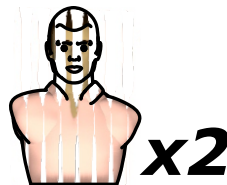


x2

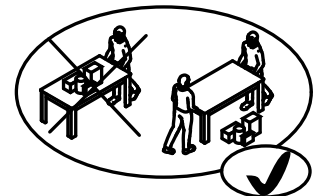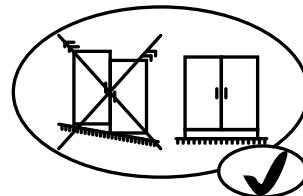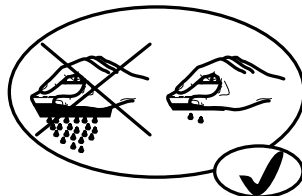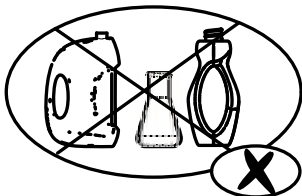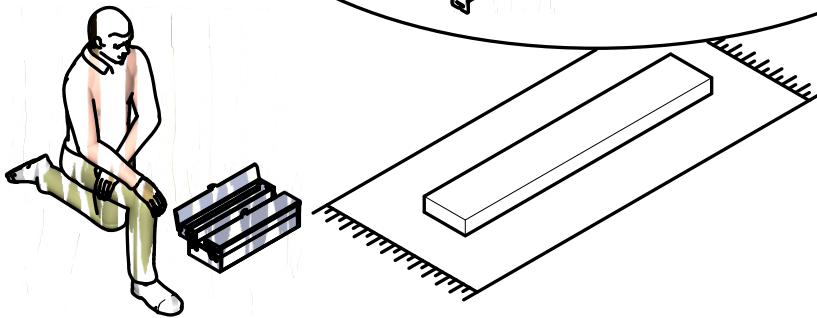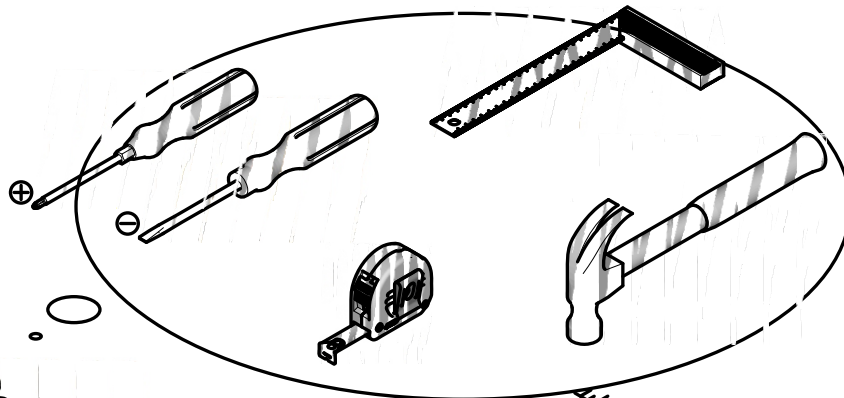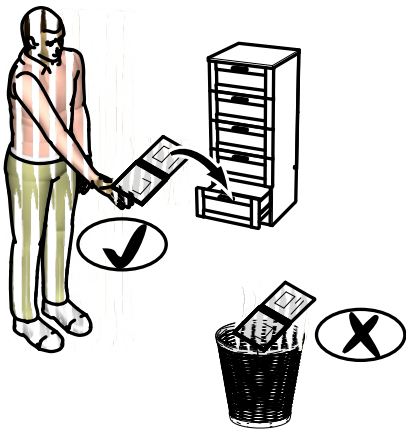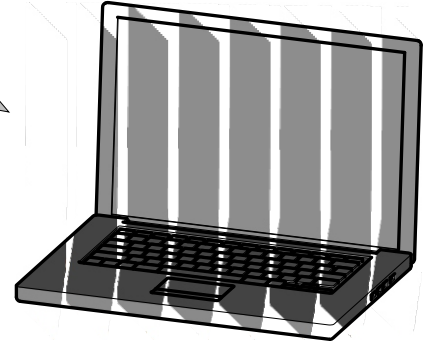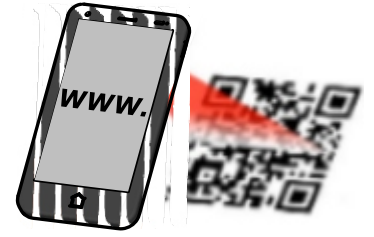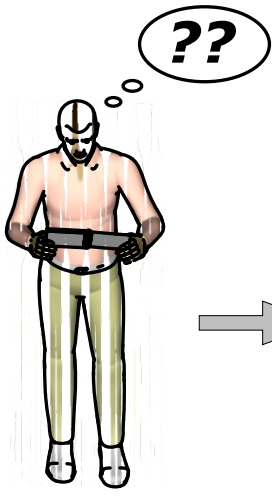



A x12

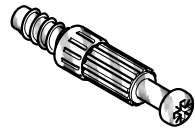


B x8




C x6



D x1

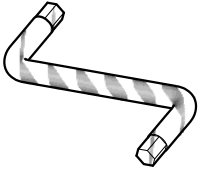


E x2

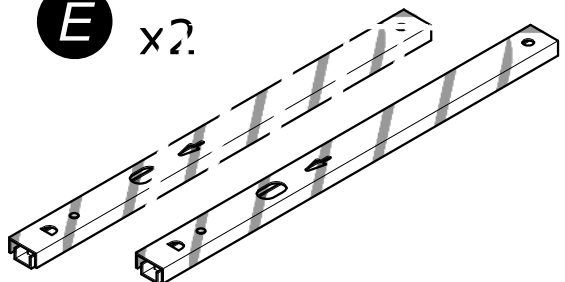

F x10




G x8

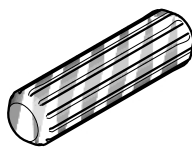

H x8




I x4

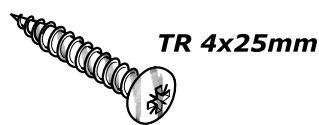


J x8



K x10

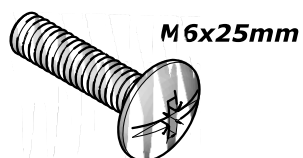

L x6

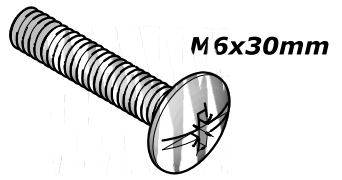


M x32




N x4



O x4

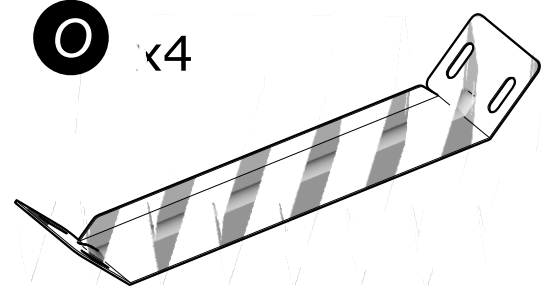


P x2

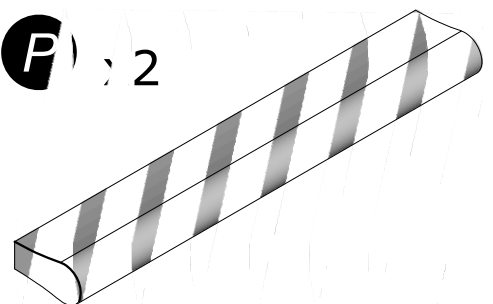


Q x8




R x8

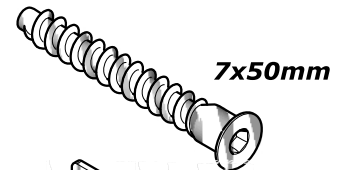


S x4

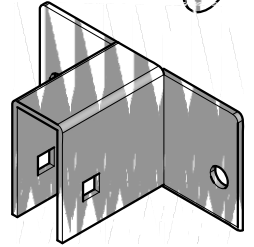

T x4




U x8

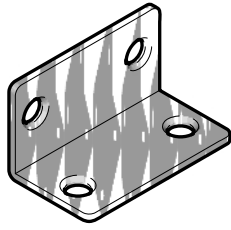

V x16








TF 6.3x13mm



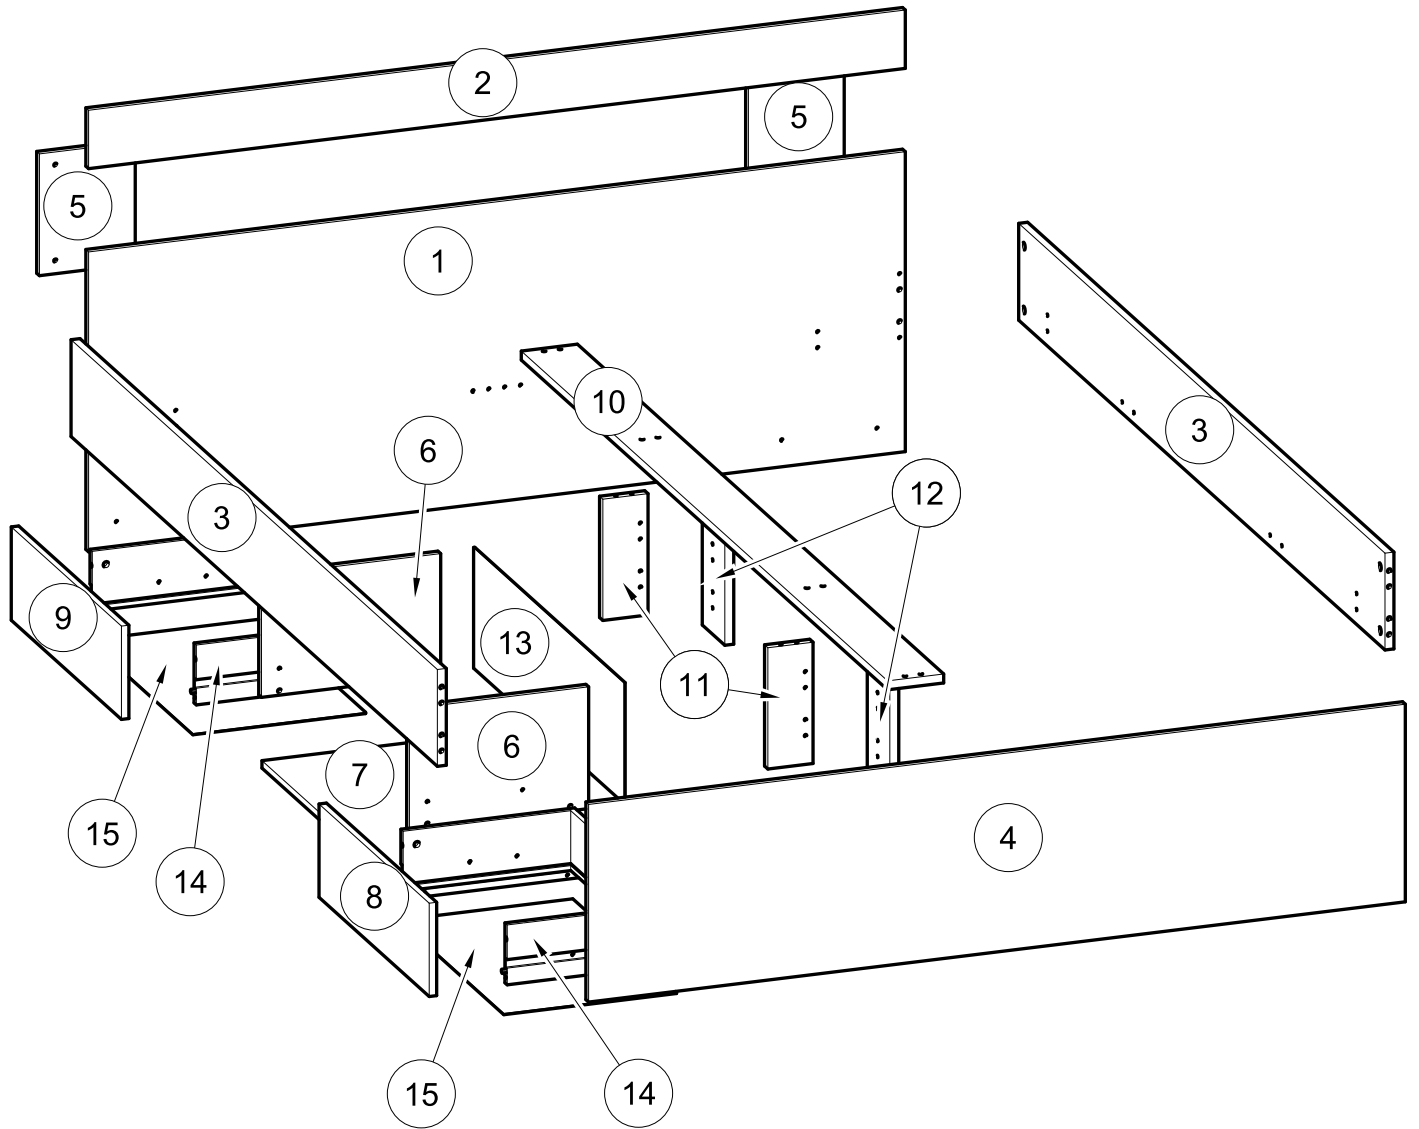




N°	Dim. (mm)	Qty.
1	1 645 x 601	x1
2	1 645 x 117	x1
3	1 998 x 194	x2
4	1 645 x 396	x1
5	244 x 193	x2
6	244 x 361	x2
7	792 x 360	x1
8	601 x 187	x1



N°	Dim. (mm)	Qty.
9	601 x 187	x1
10	1 998 x 113	x1
11	243 x 91	x2
12	238 x 123	x2
13	820 x 242	x1
14	350 x 580	x2
15	566 x 348	x2

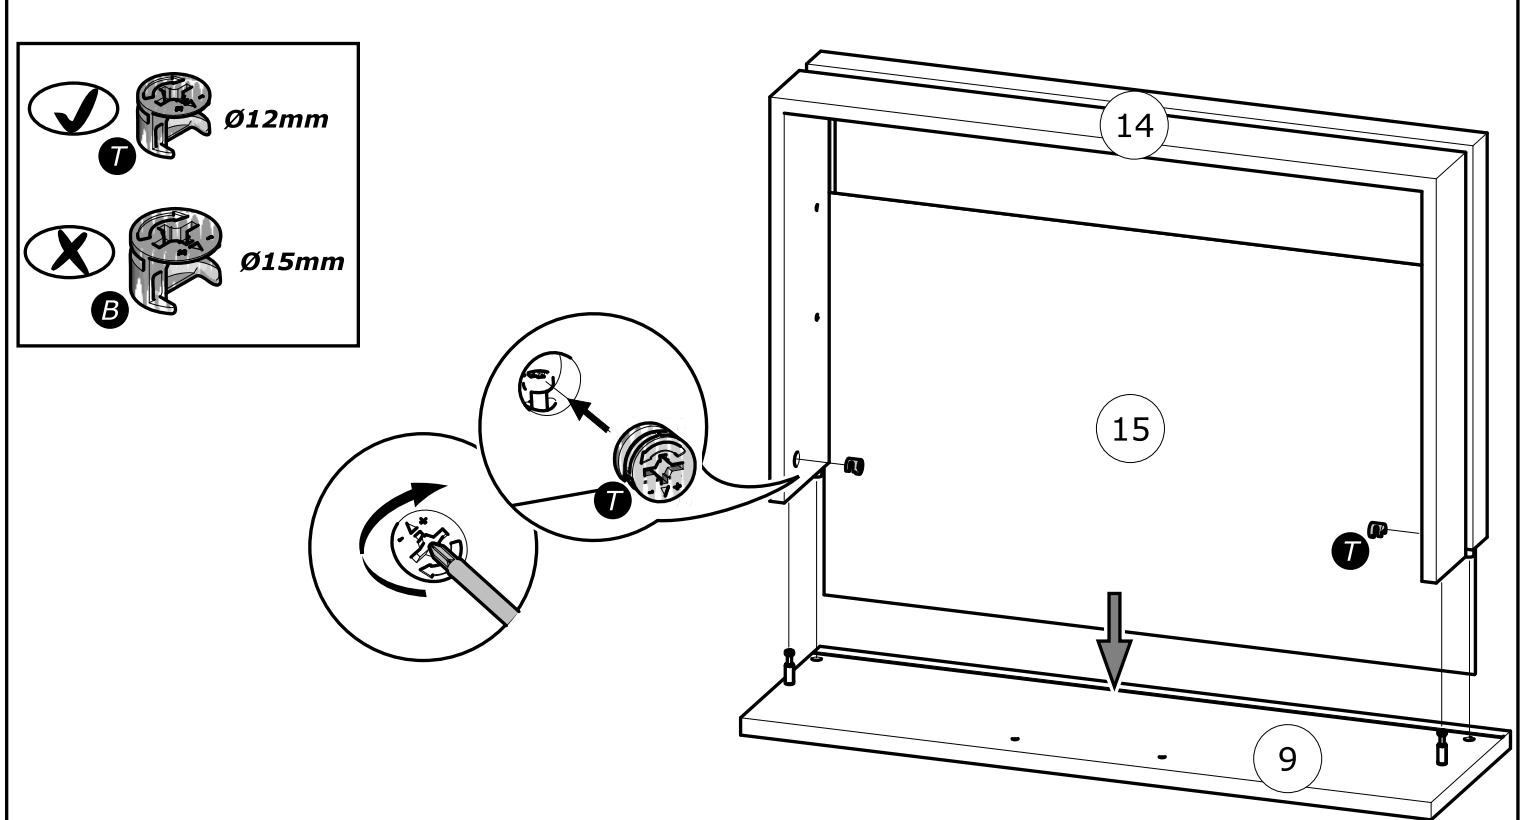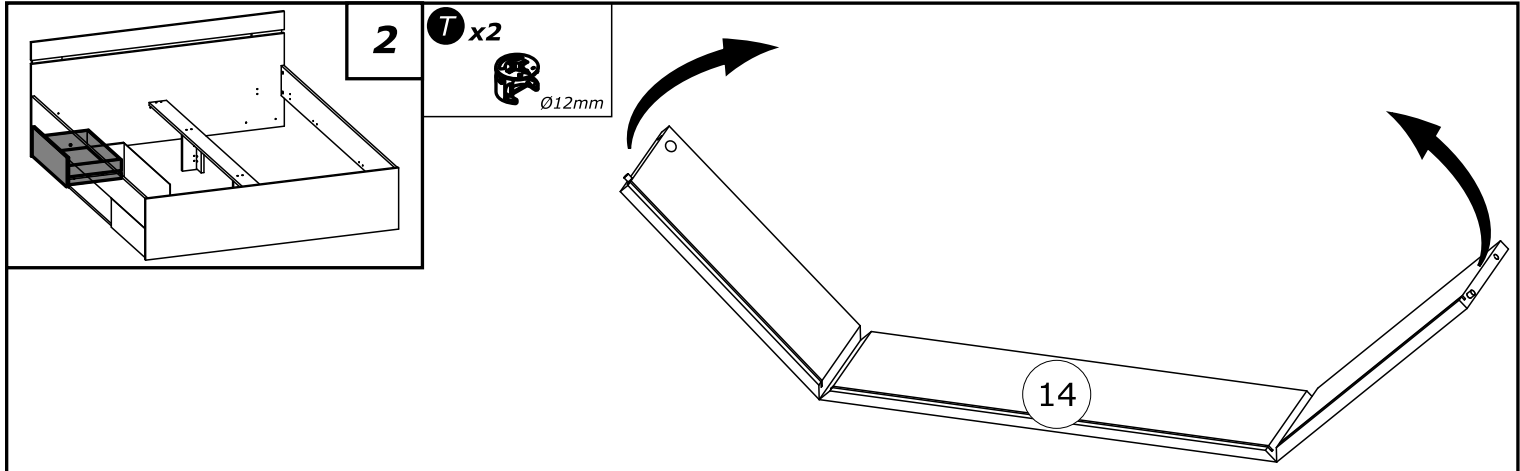
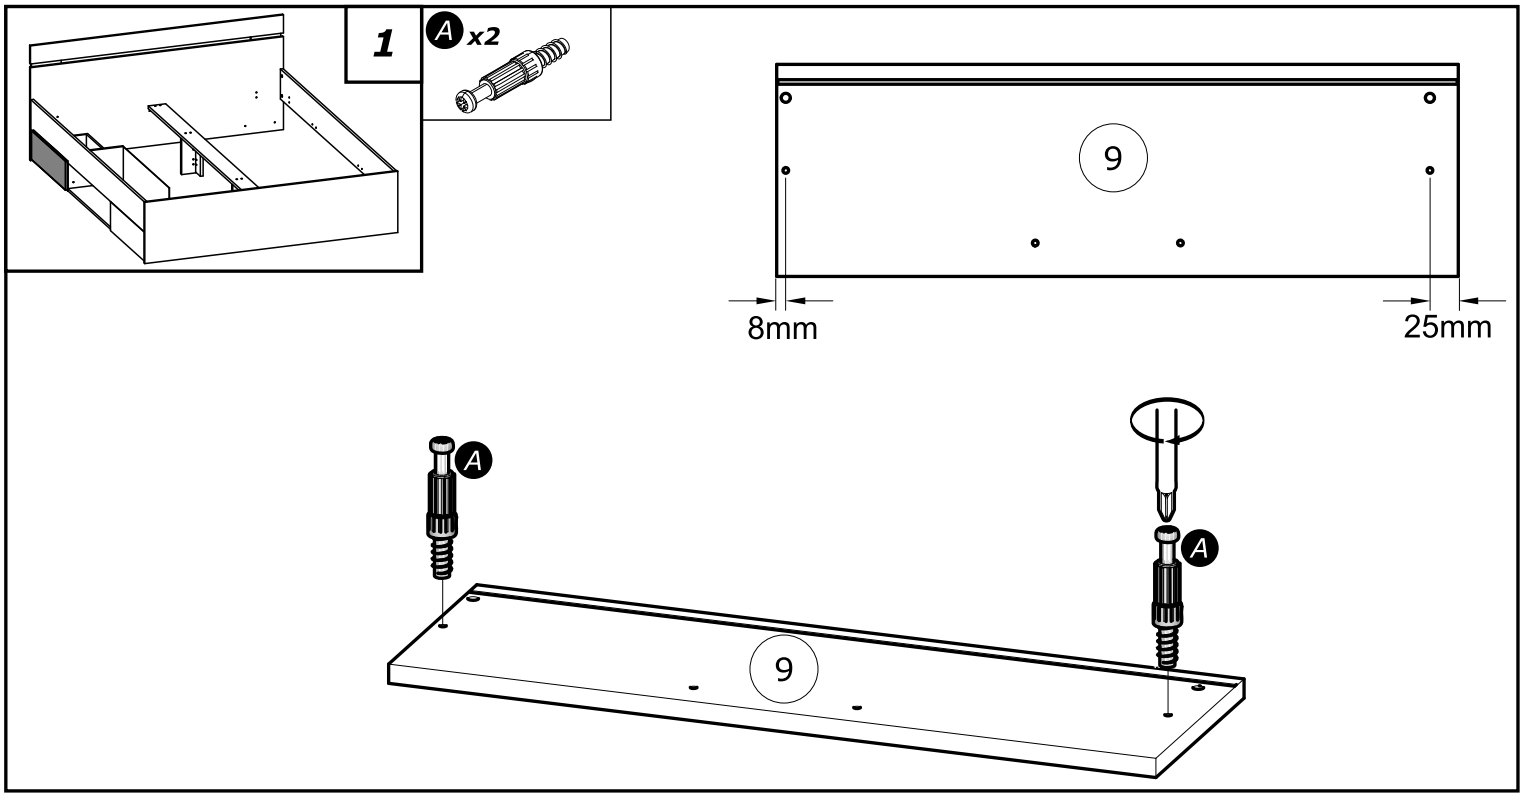


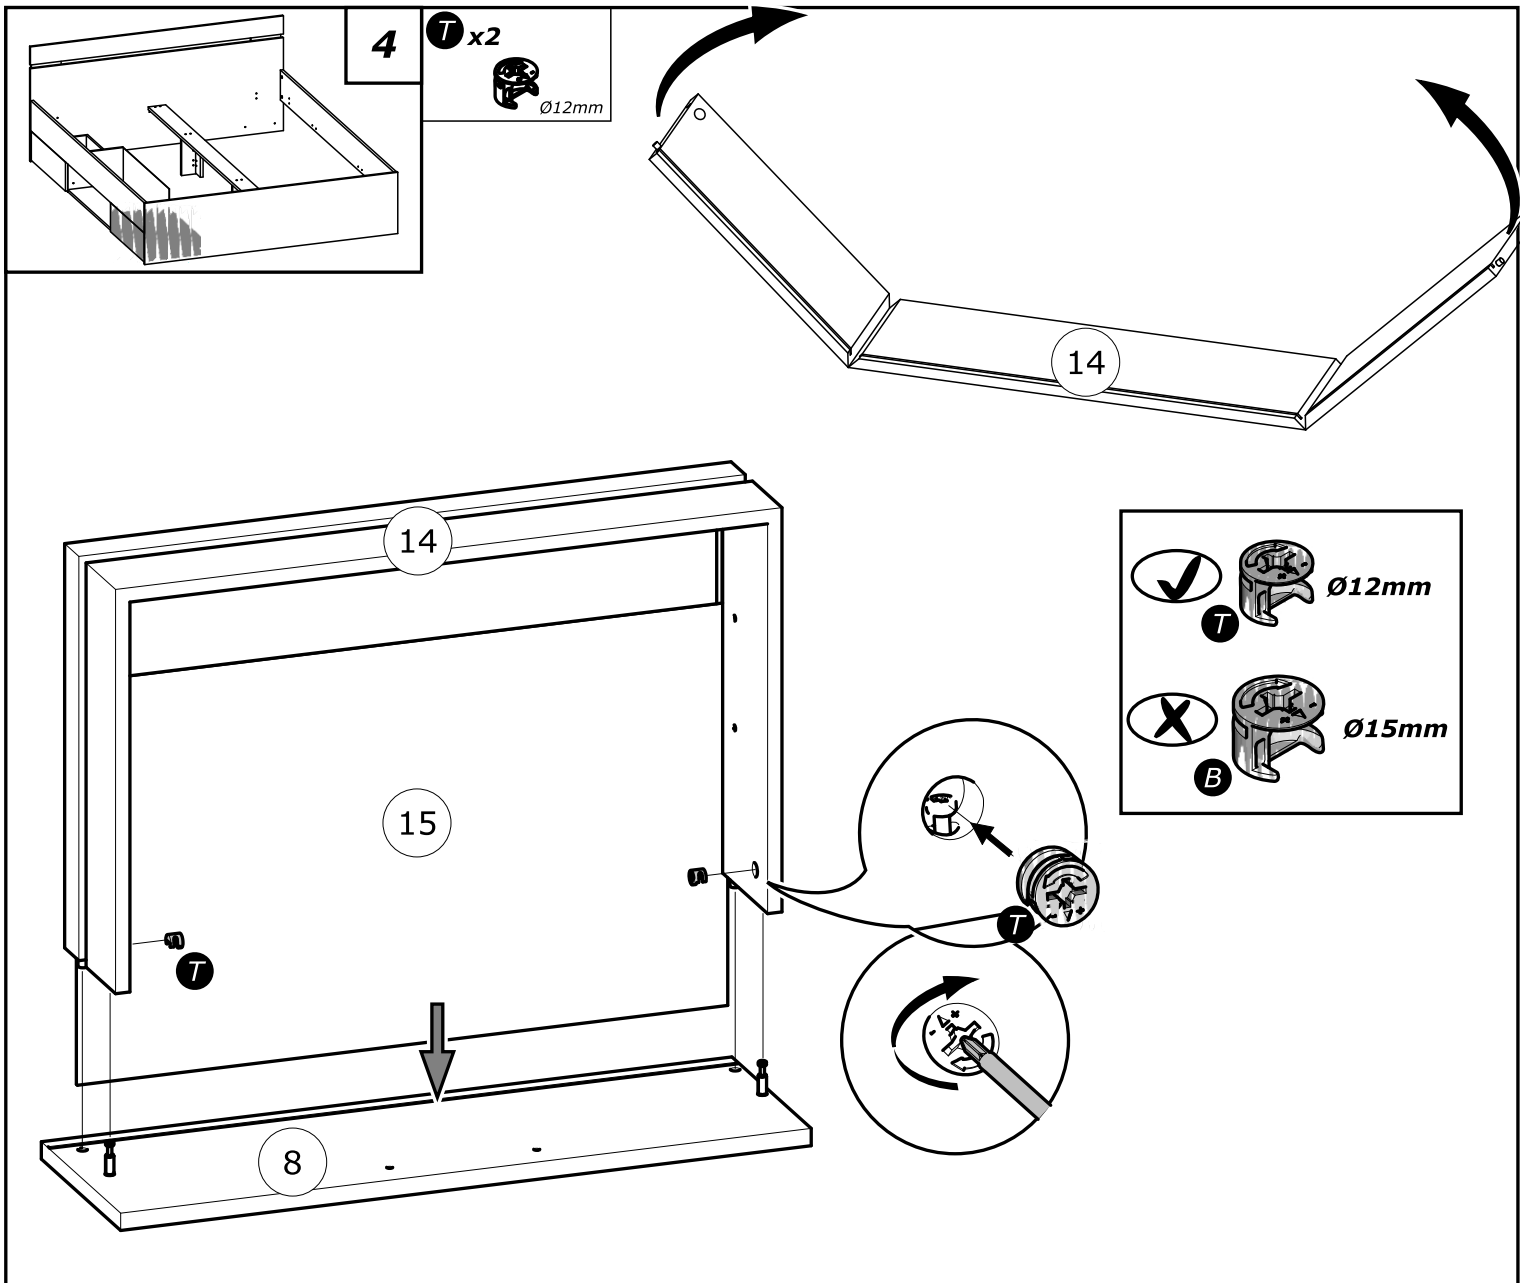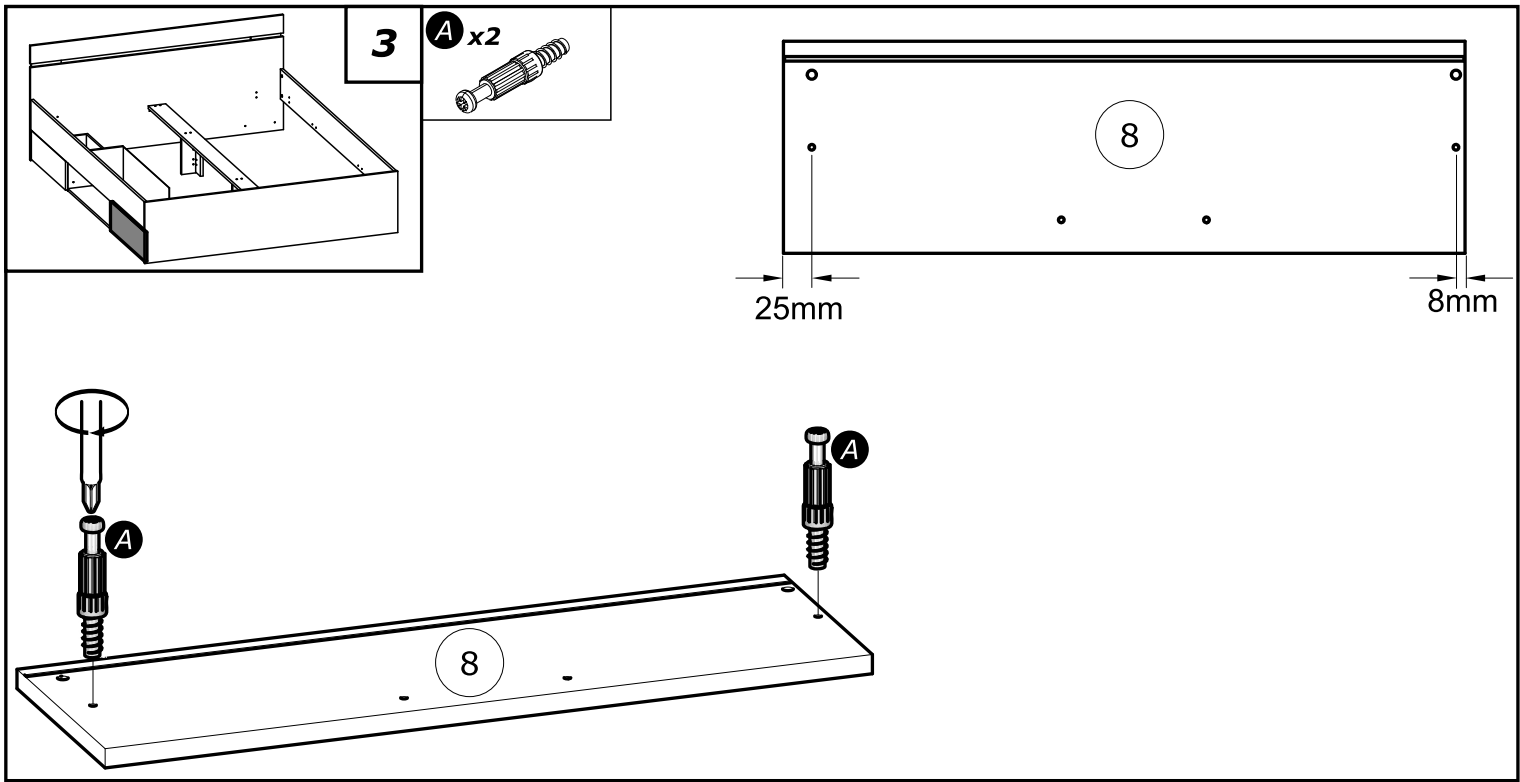


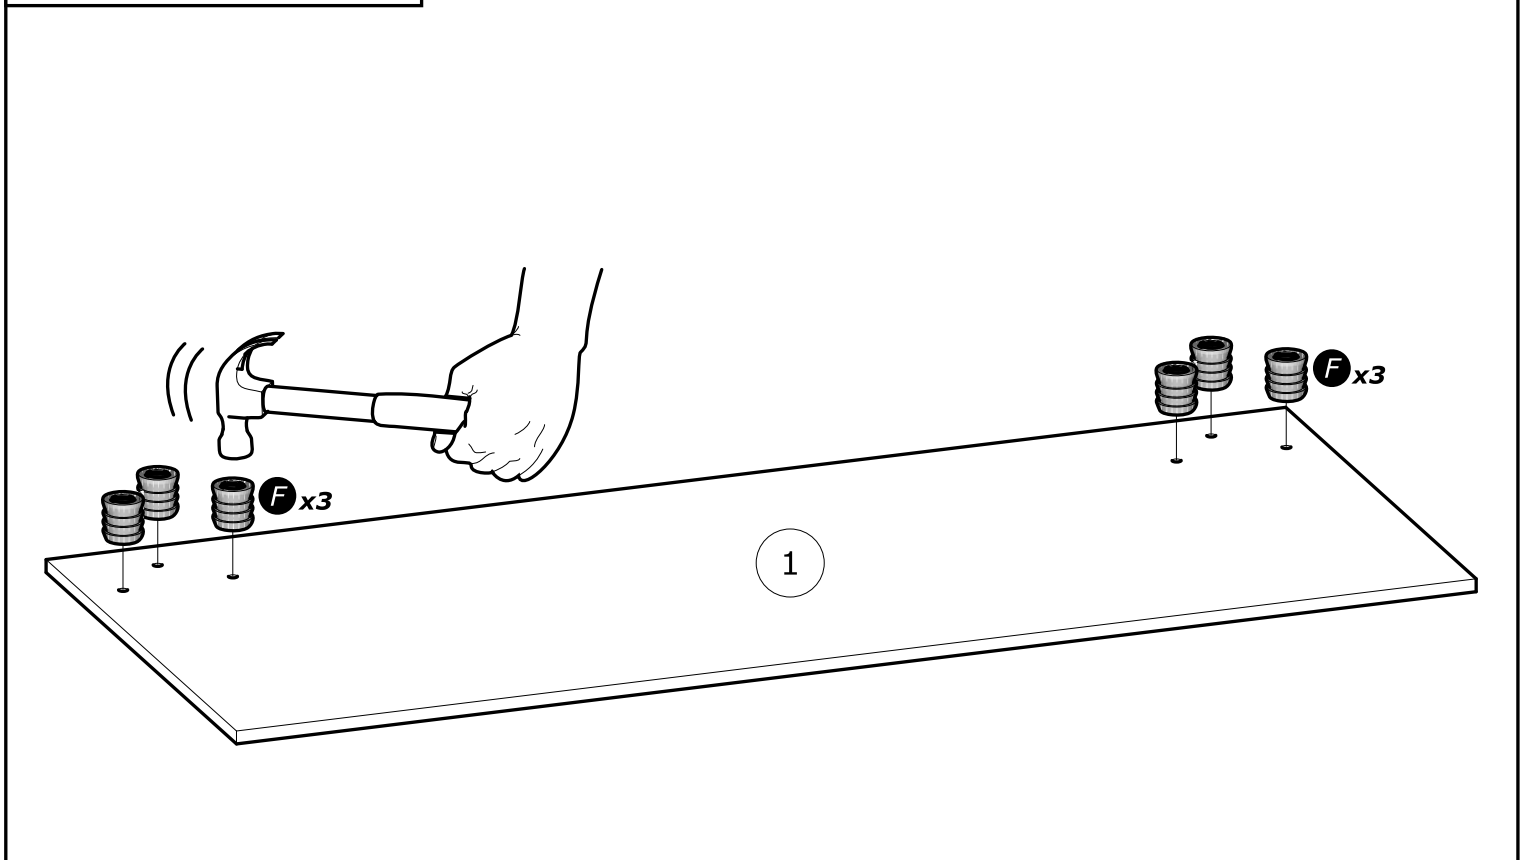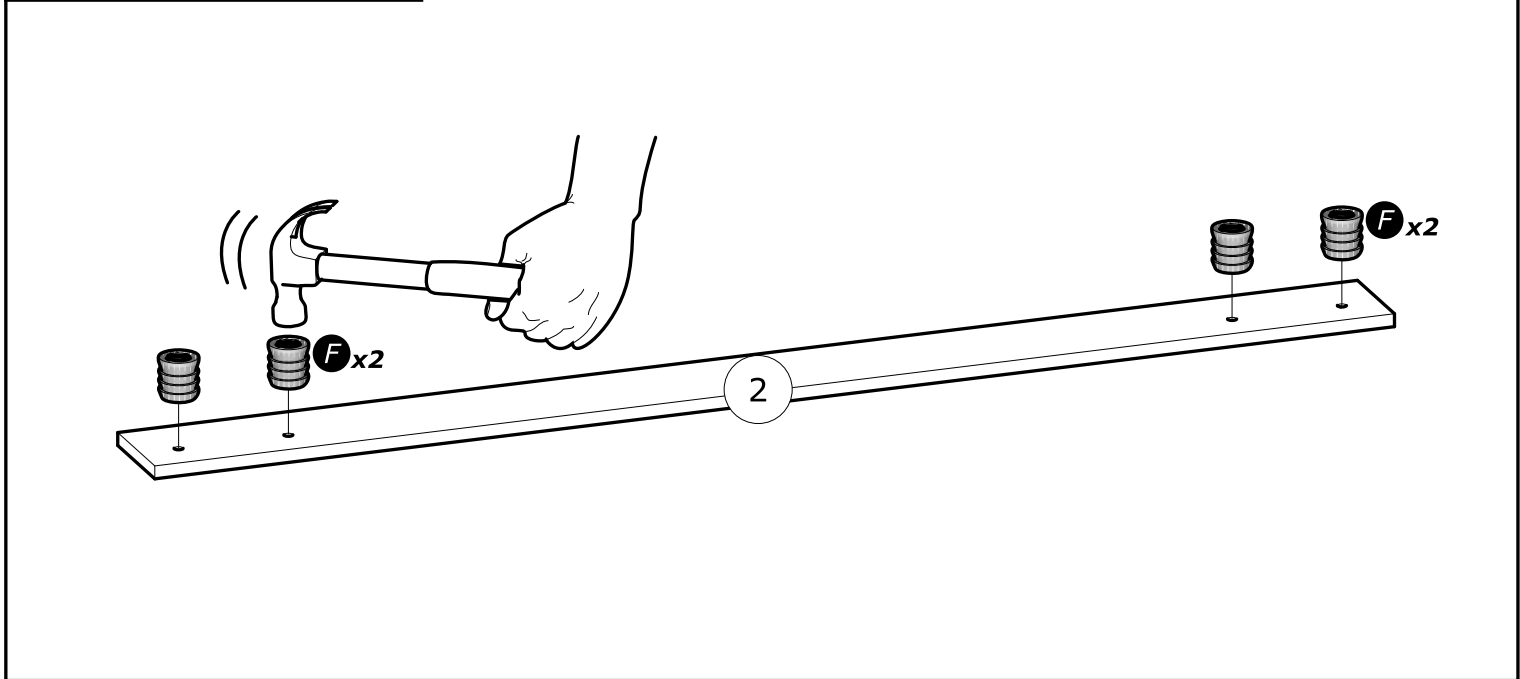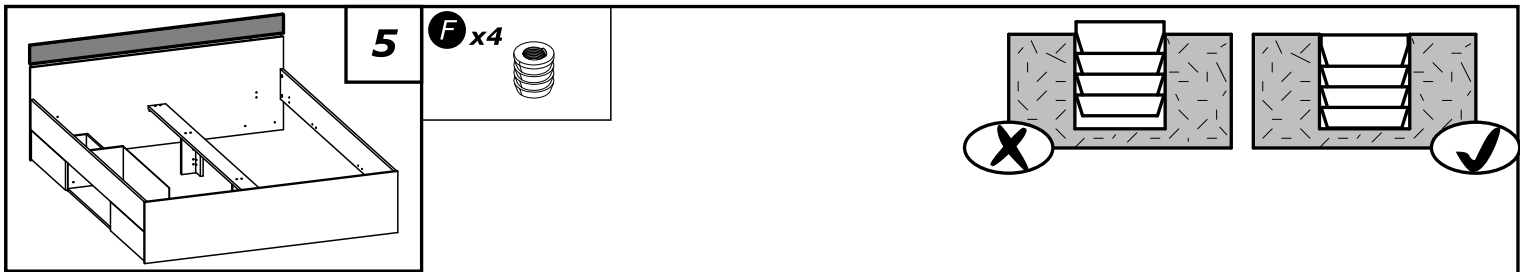

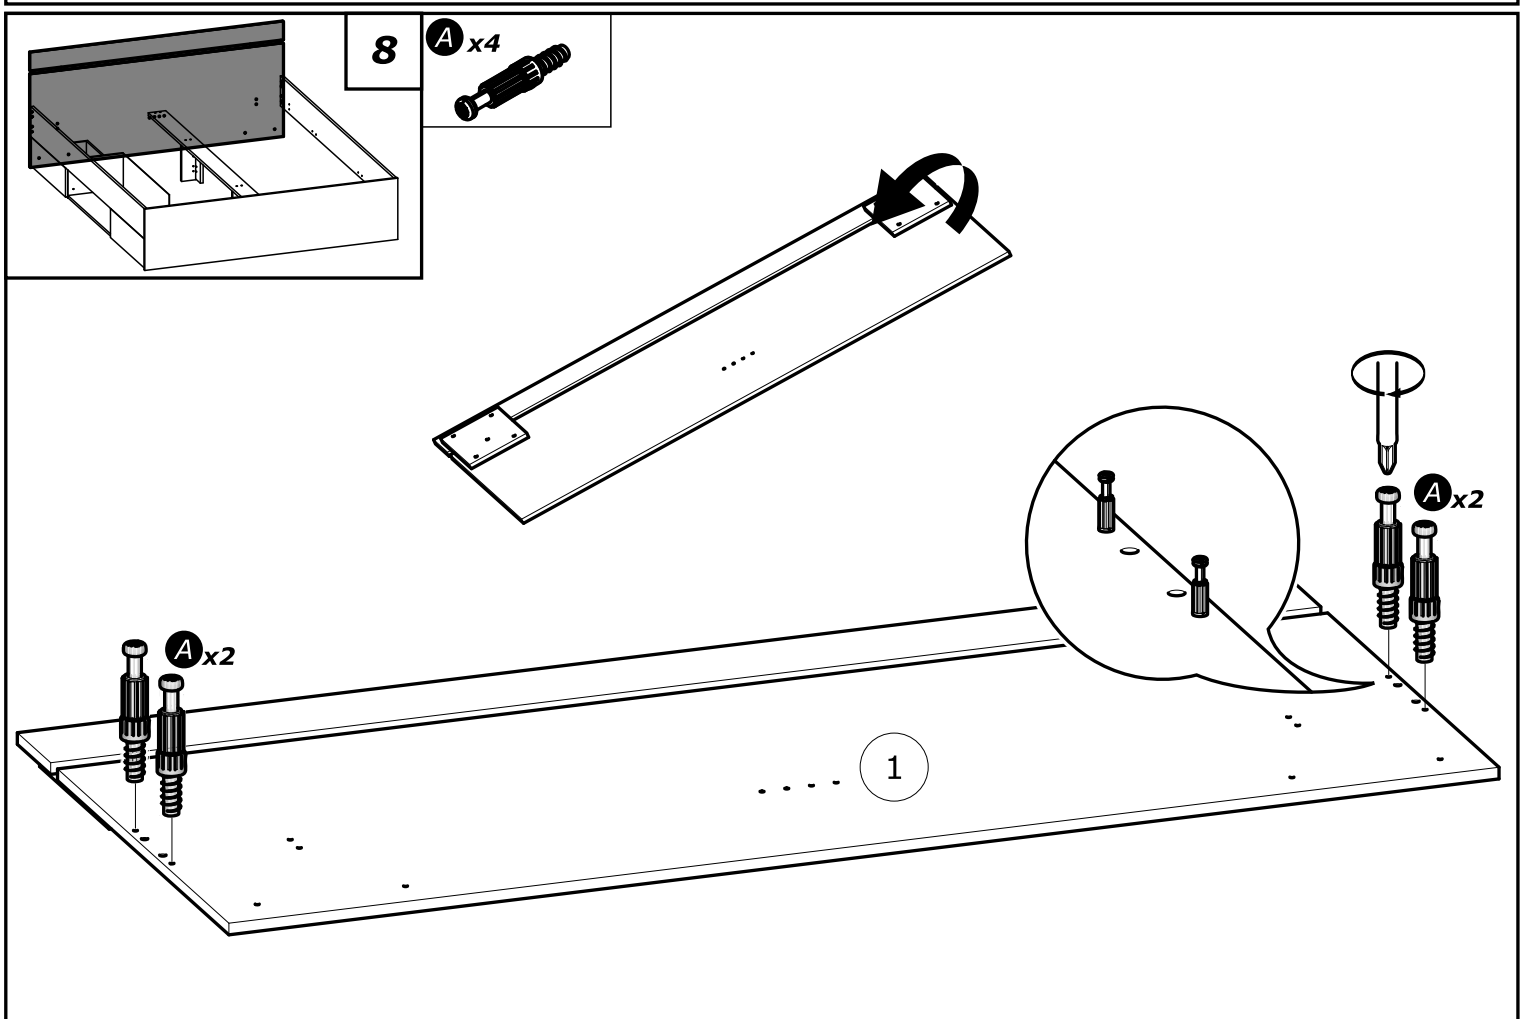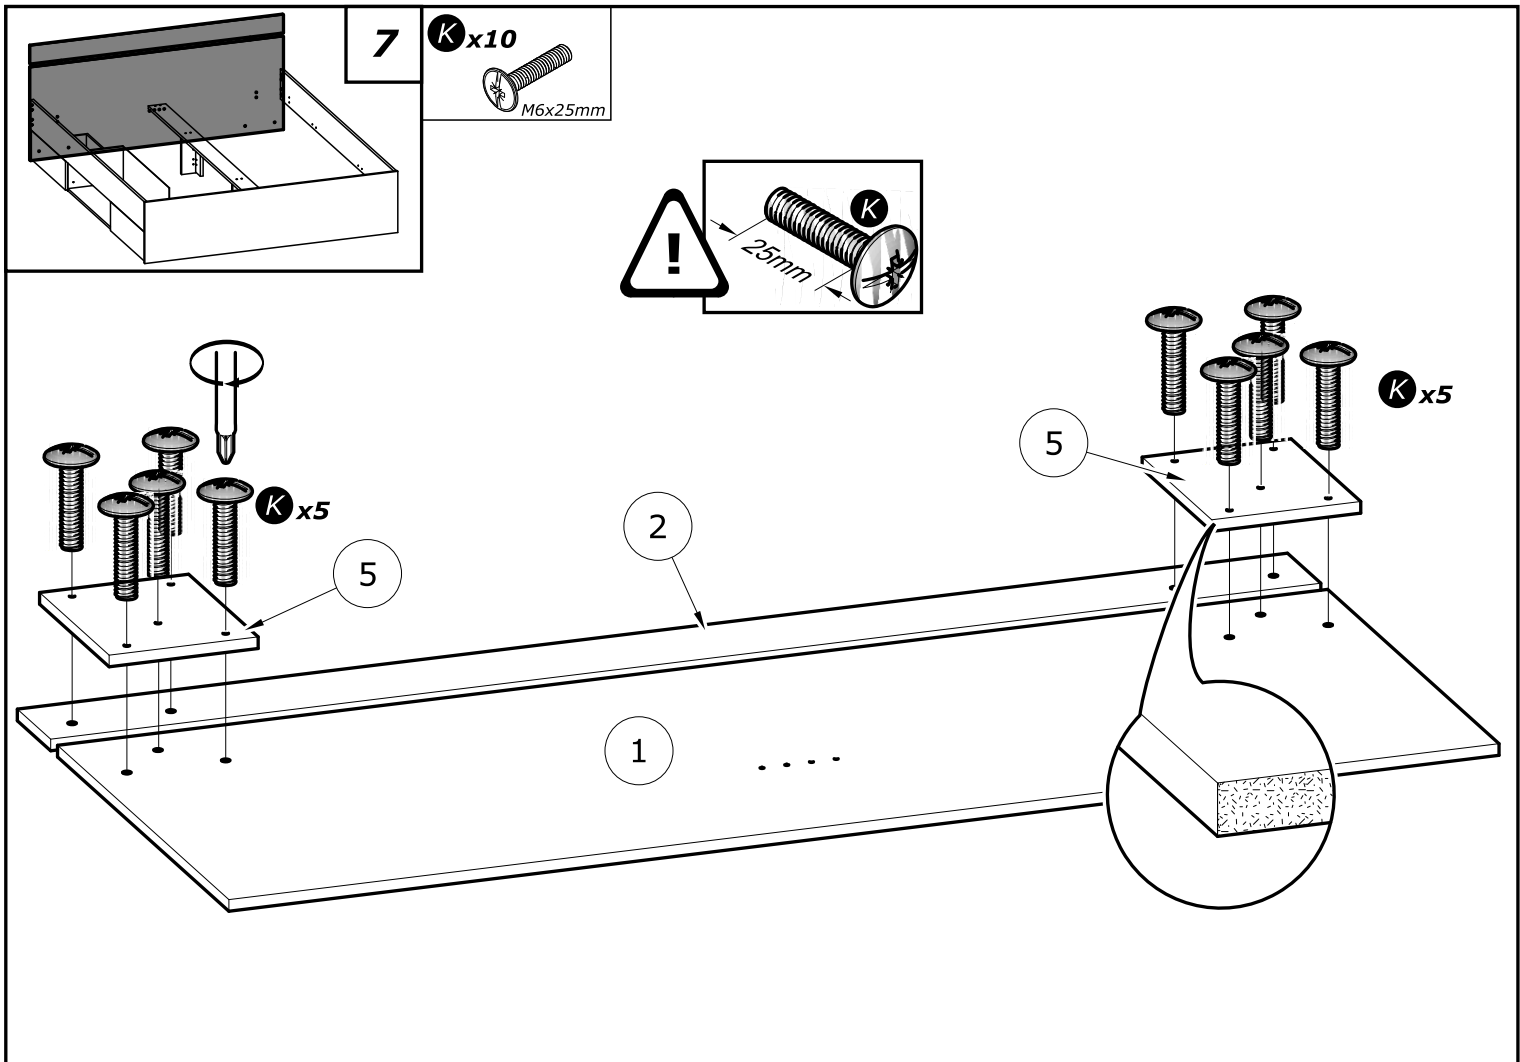

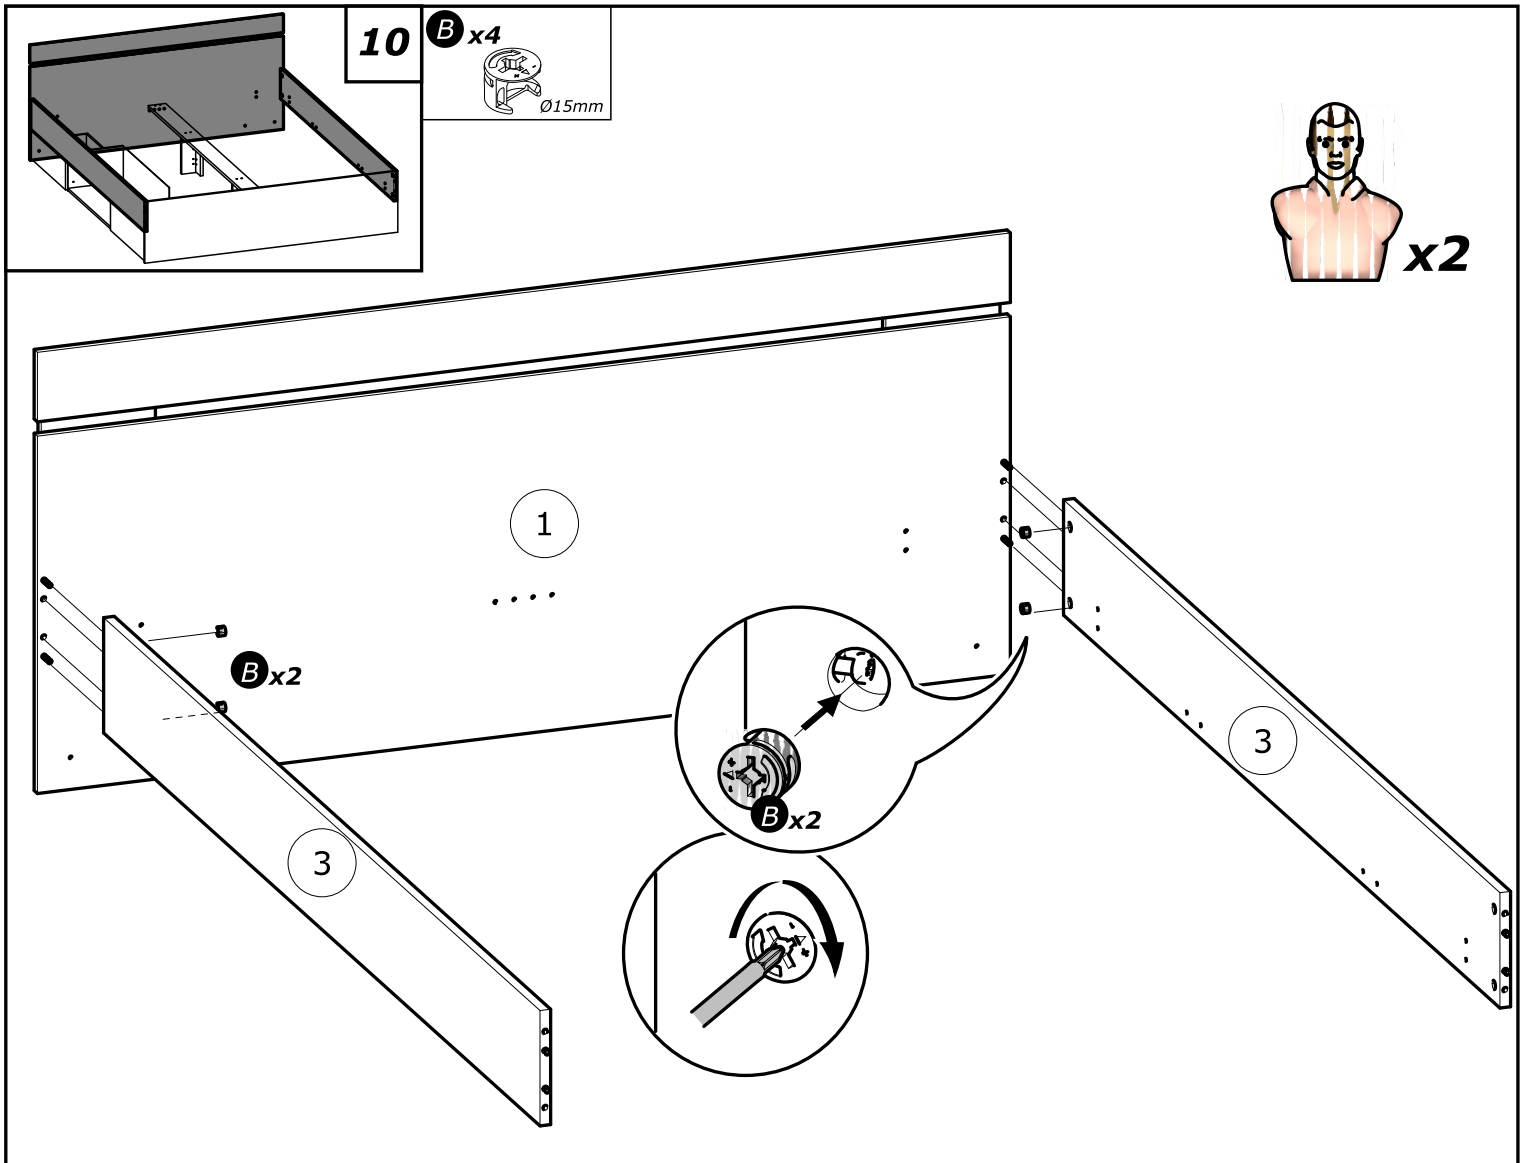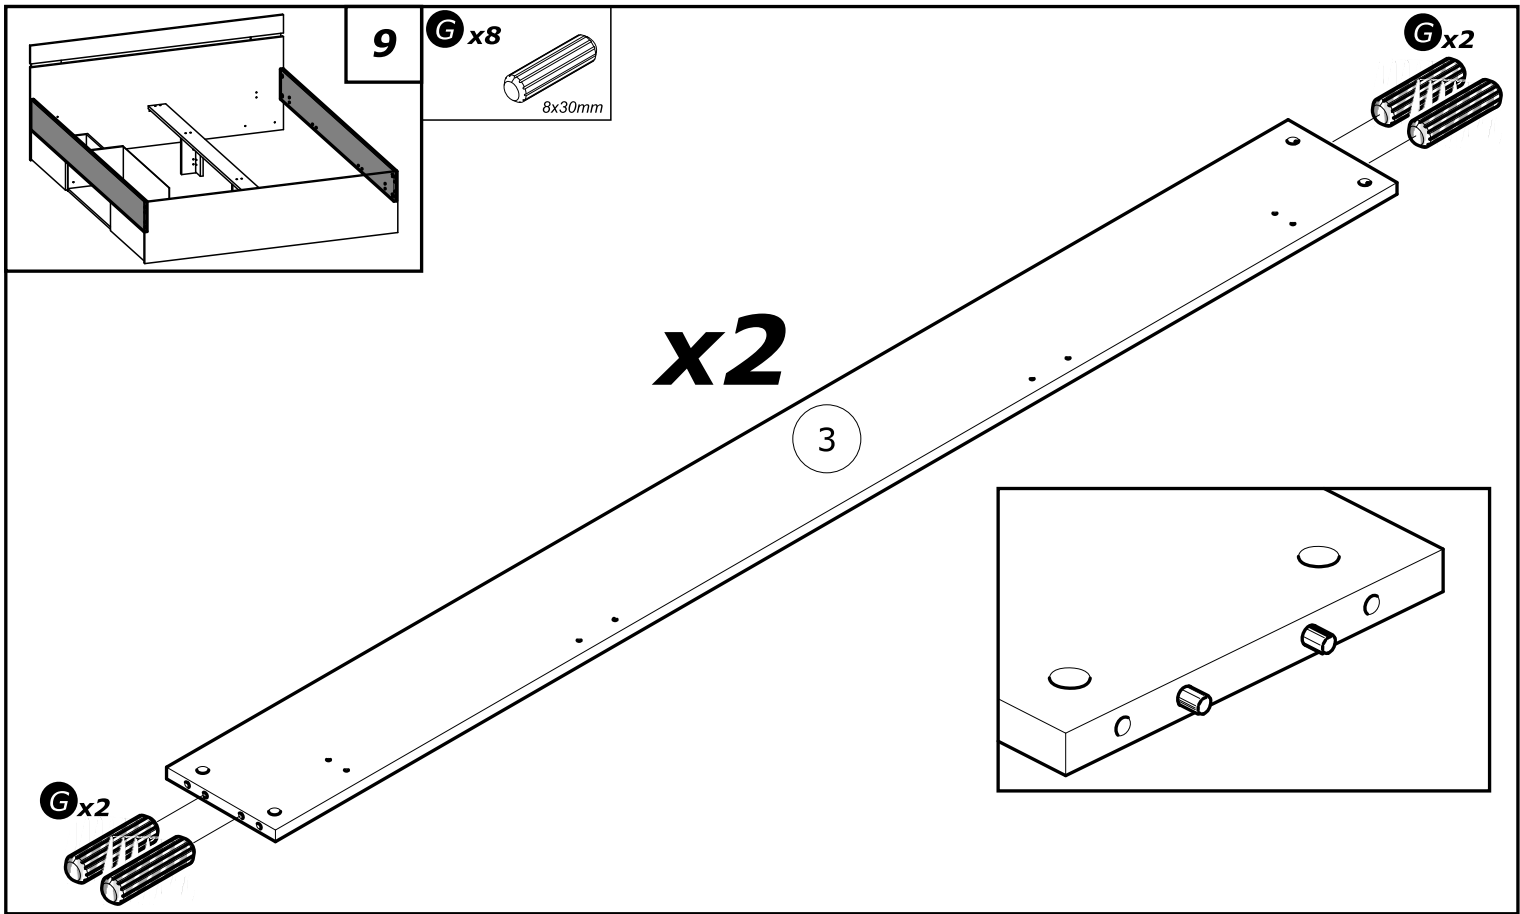


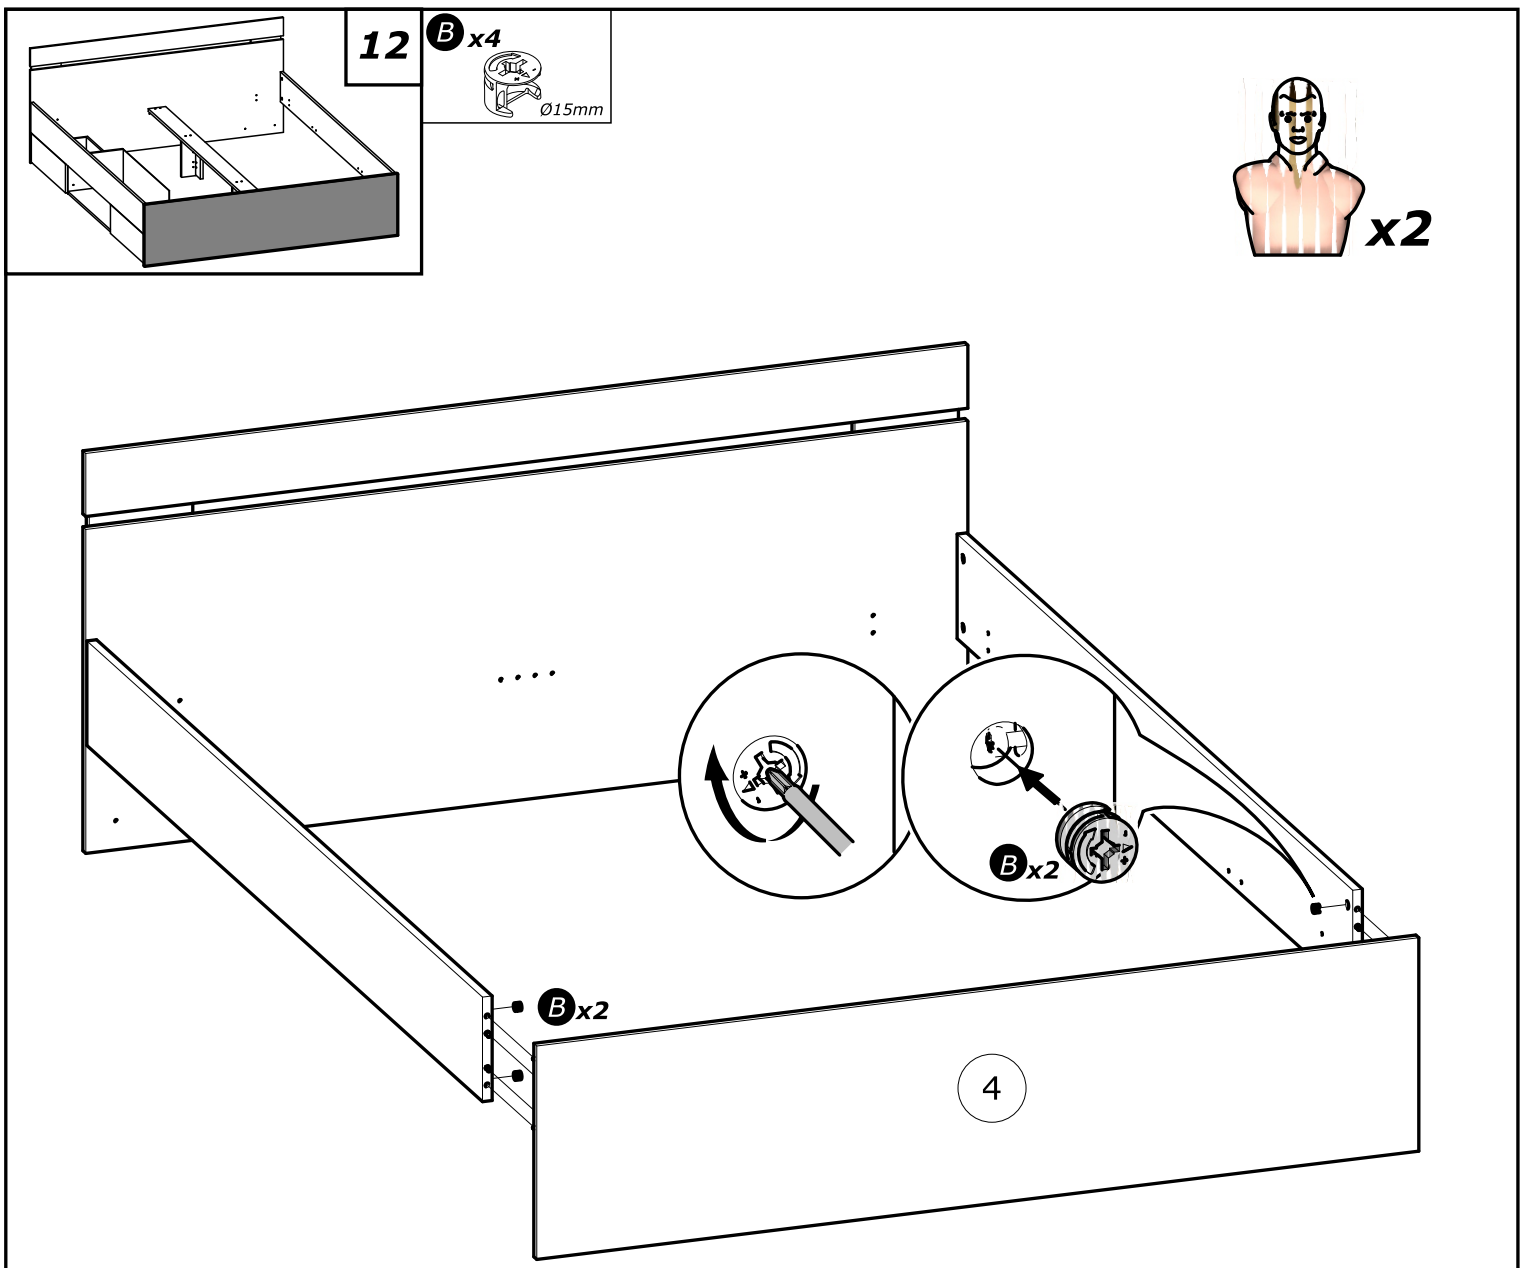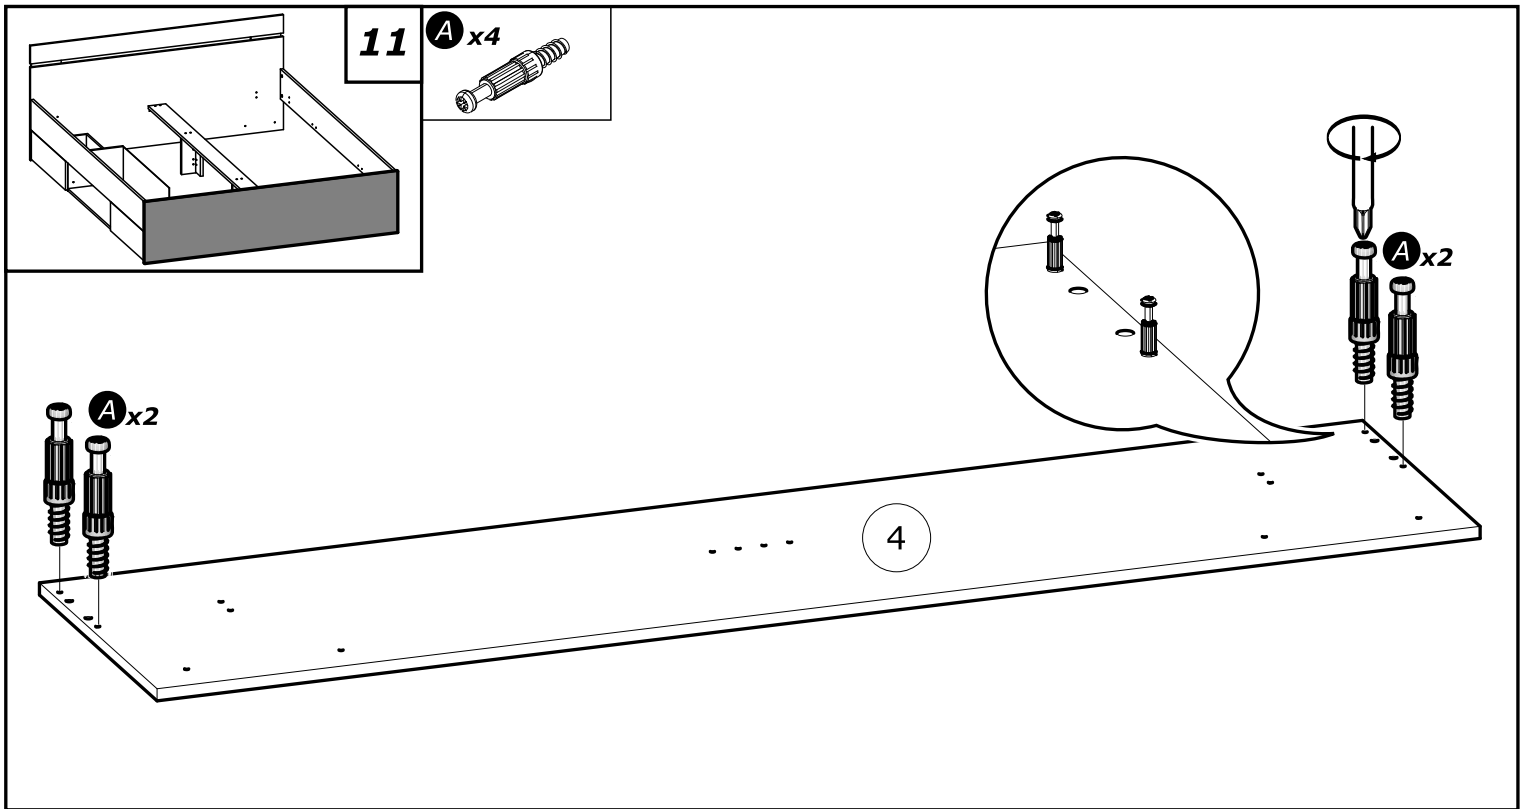

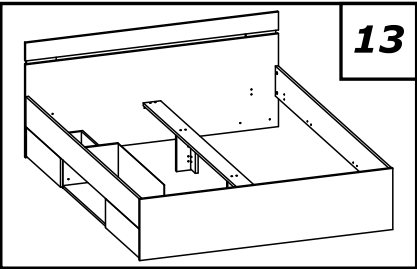

13


⊙ x4



⊖ x16



TF 6.3x13mm

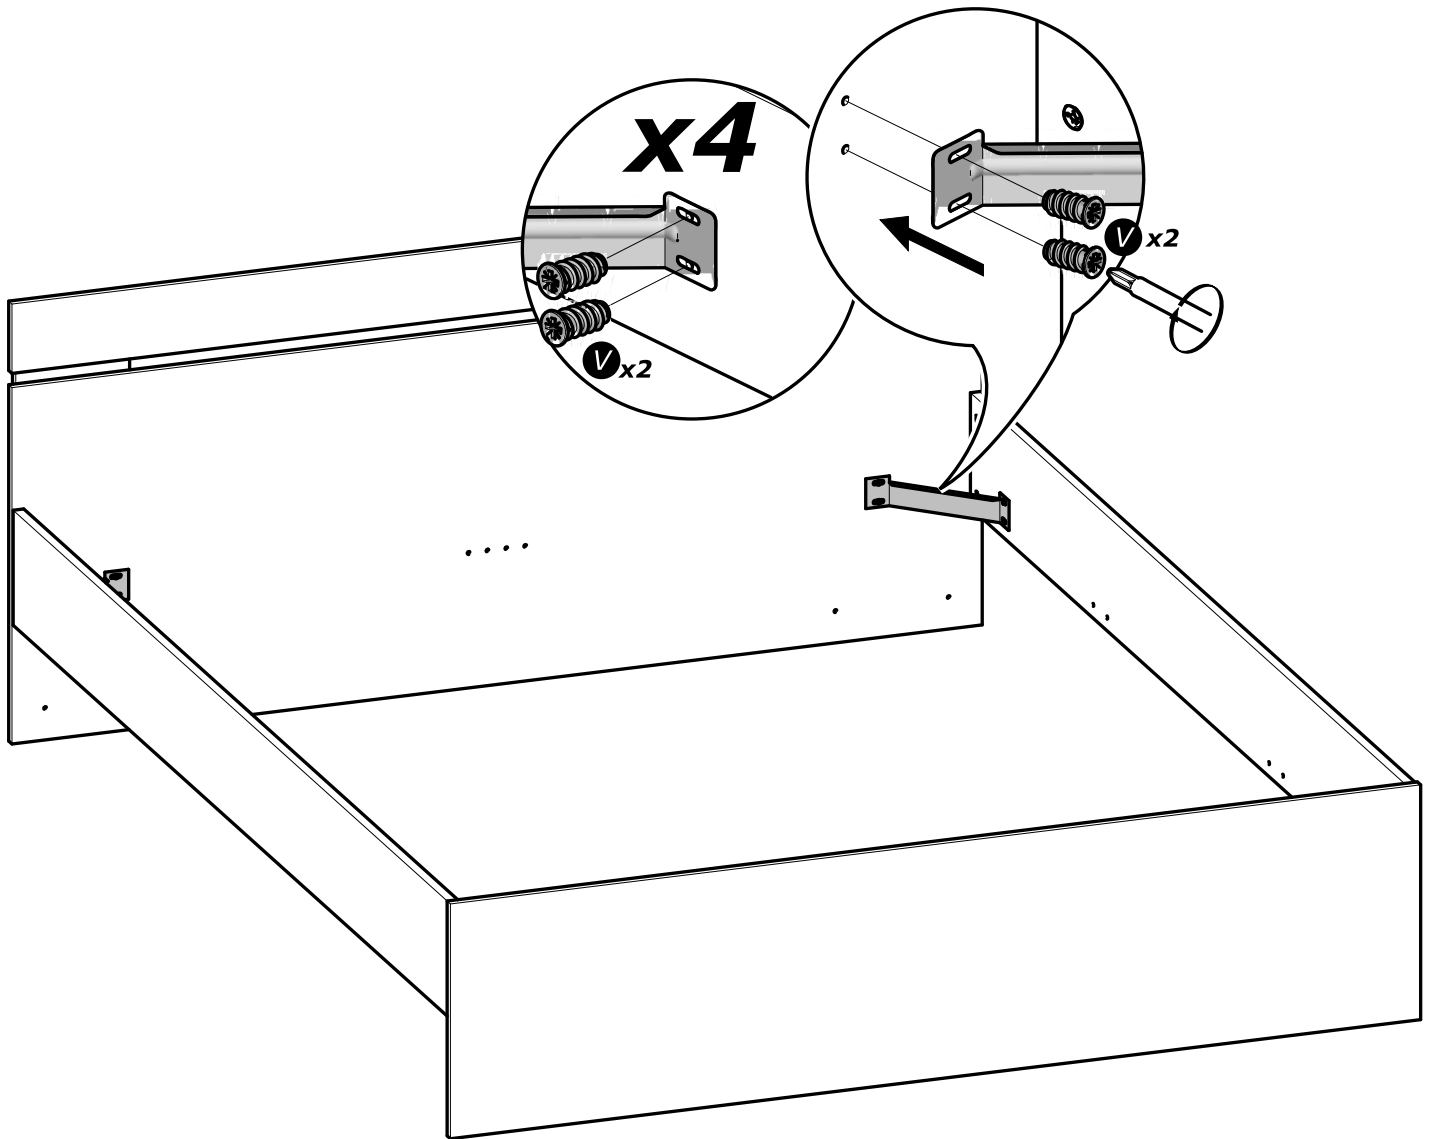

x4

⊖ x2




⊖ x2

14

E x1

J x2

TF 6.3x9mm

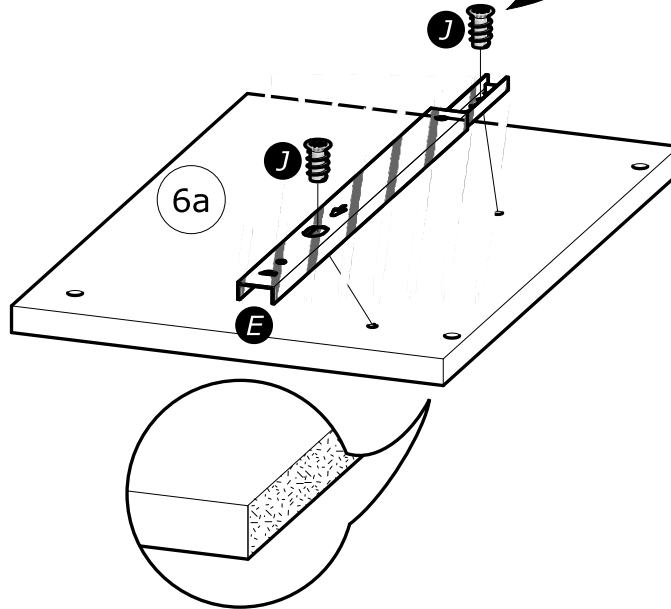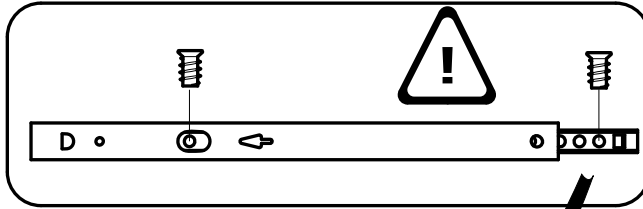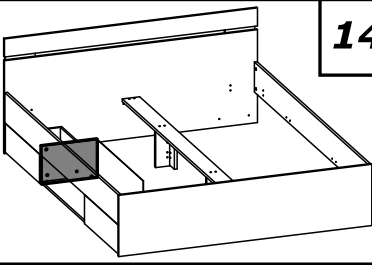




www.Demeyere.fr

15




E x1







J x2

TF 6.3x9mm

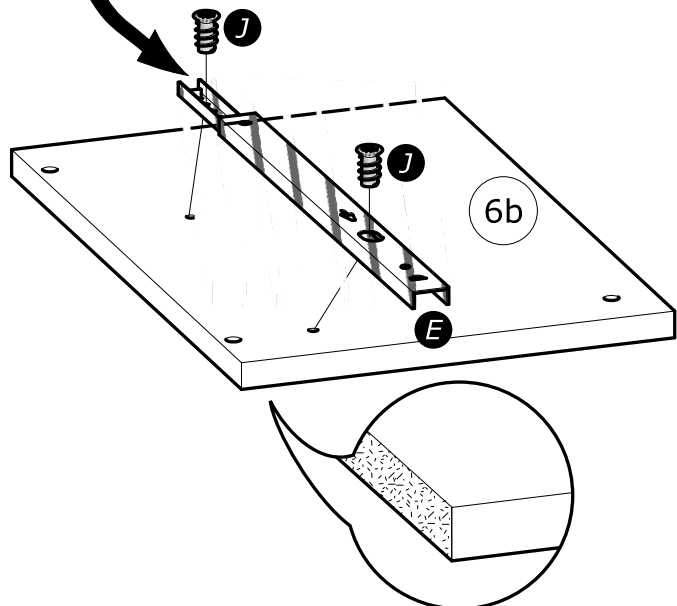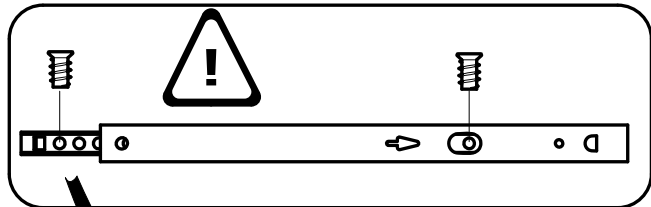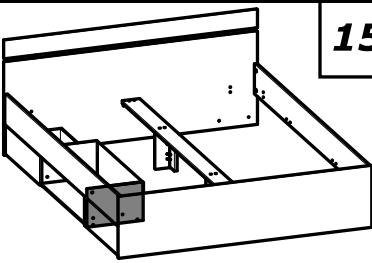


www.Demeyere.fr

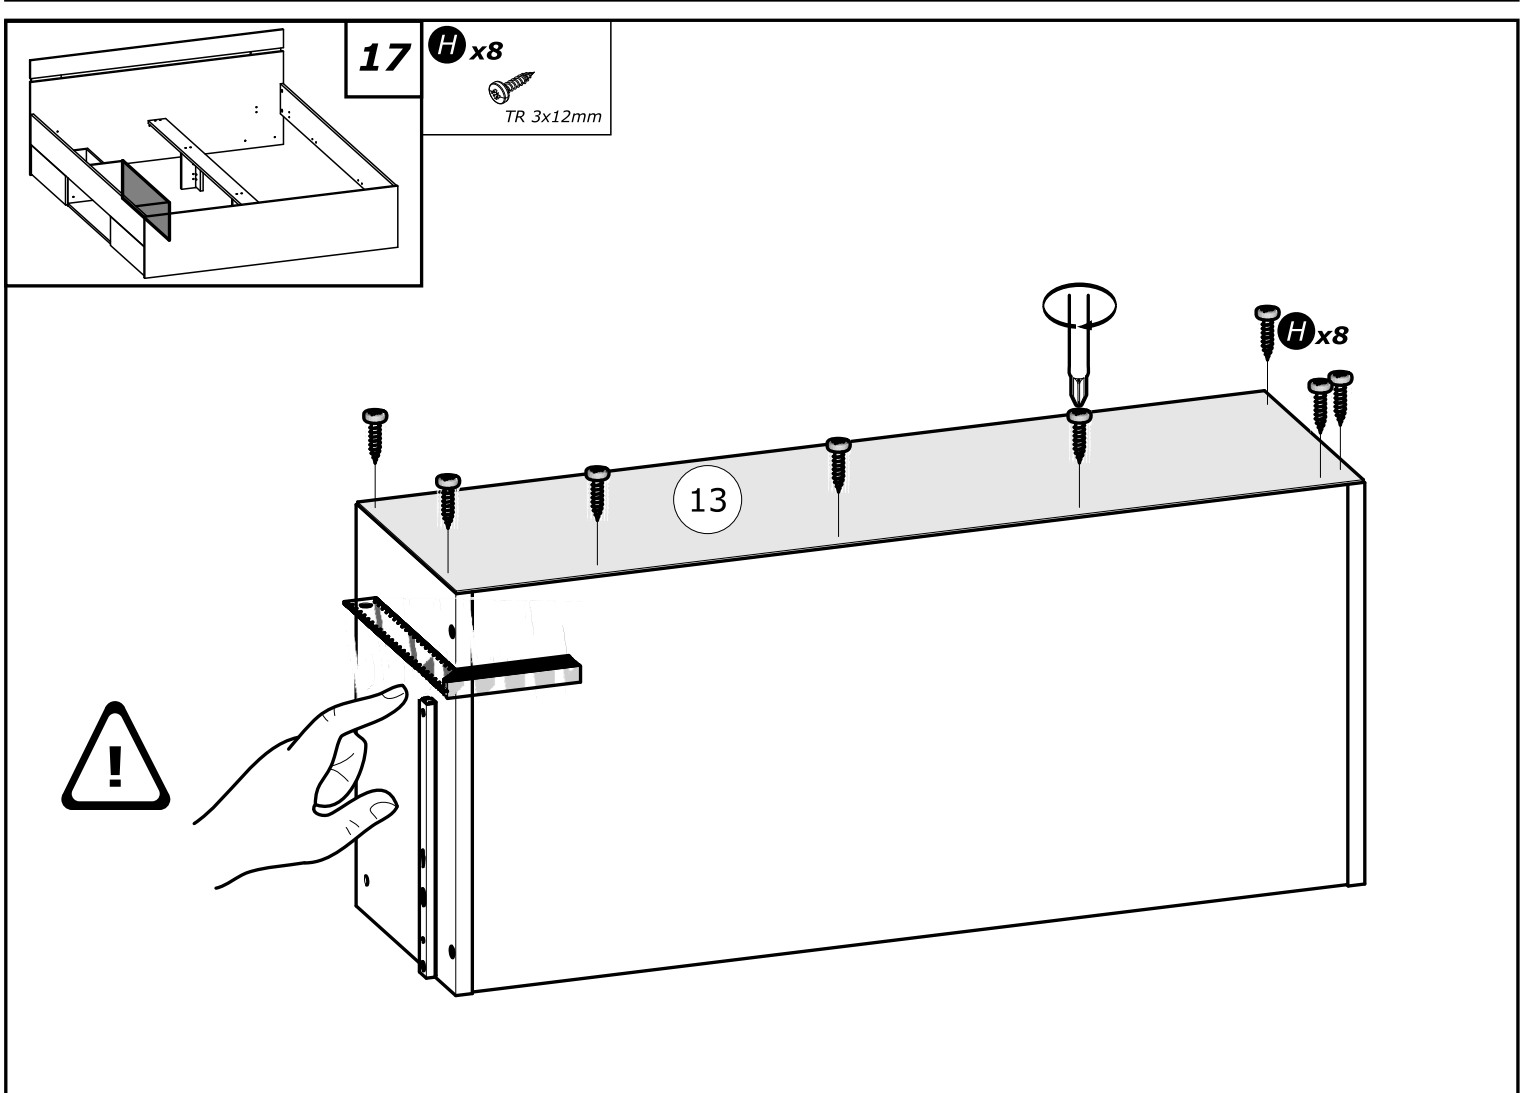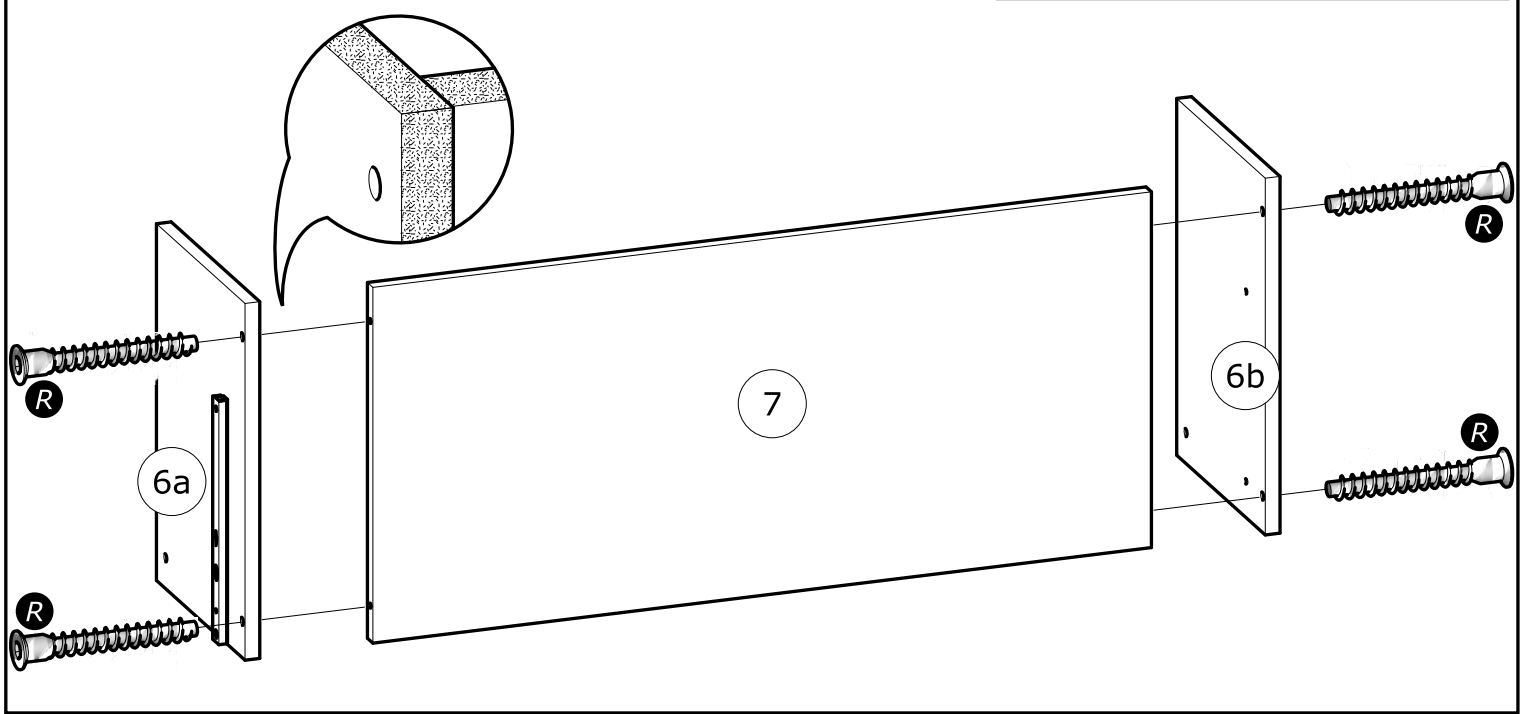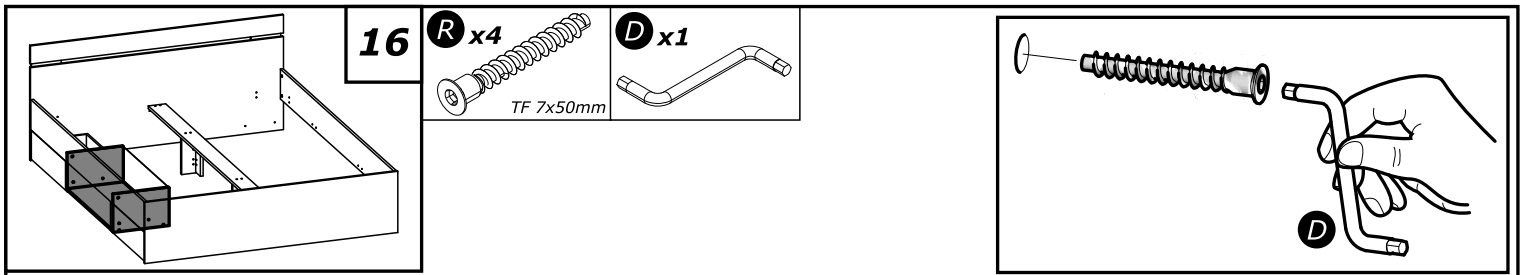


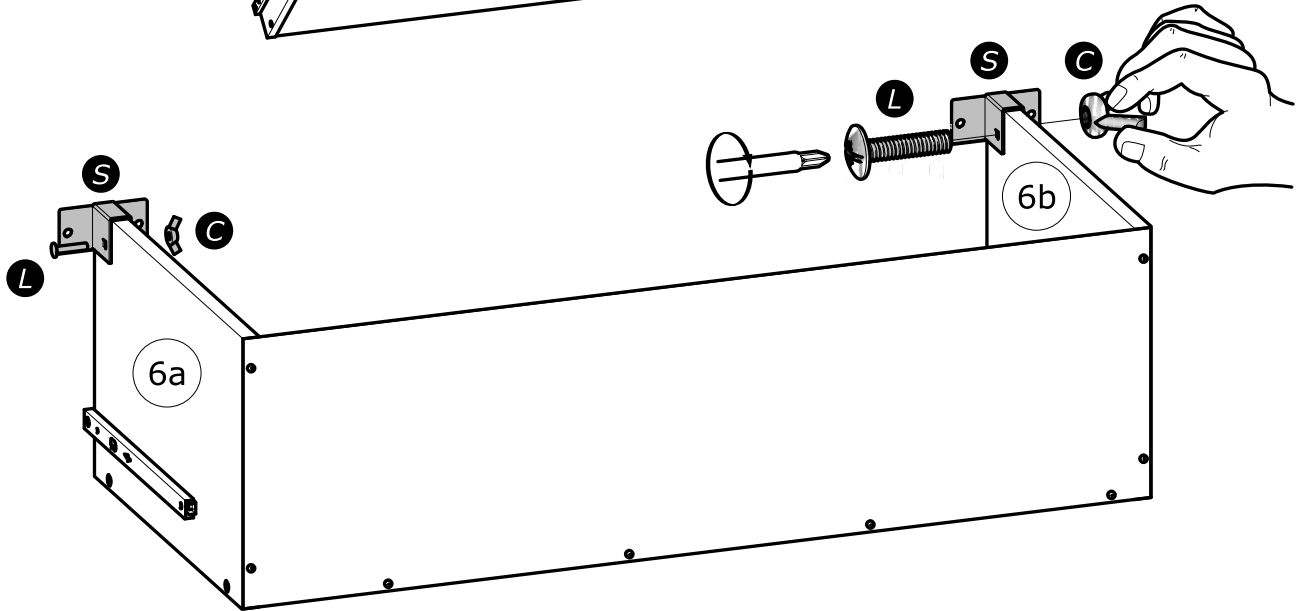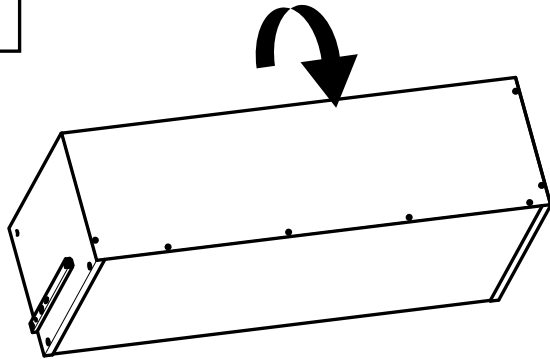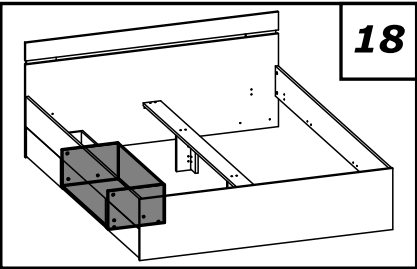

A

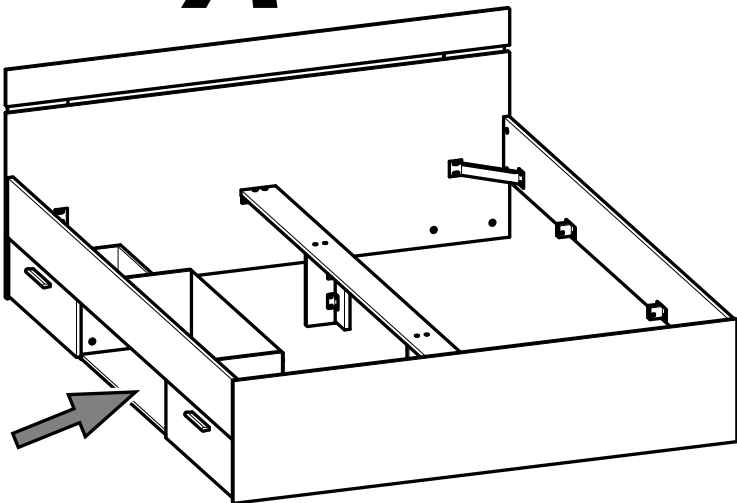

B

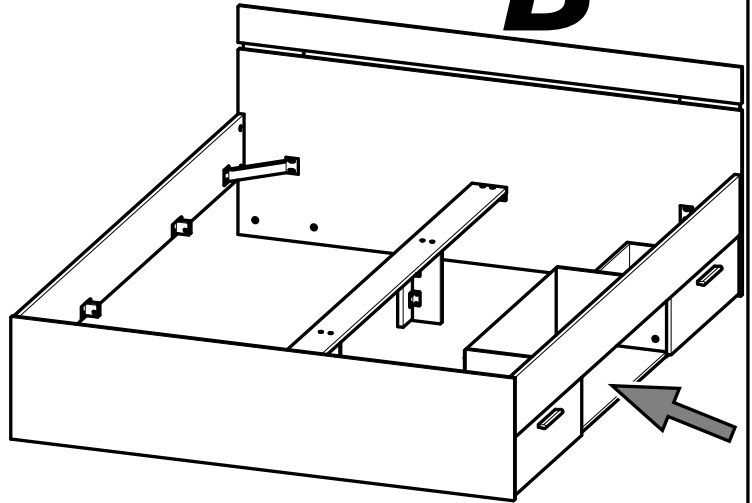


19


M x4




TR 6.3x13mm




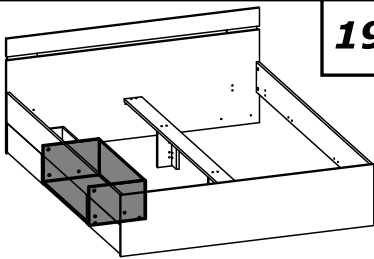


A

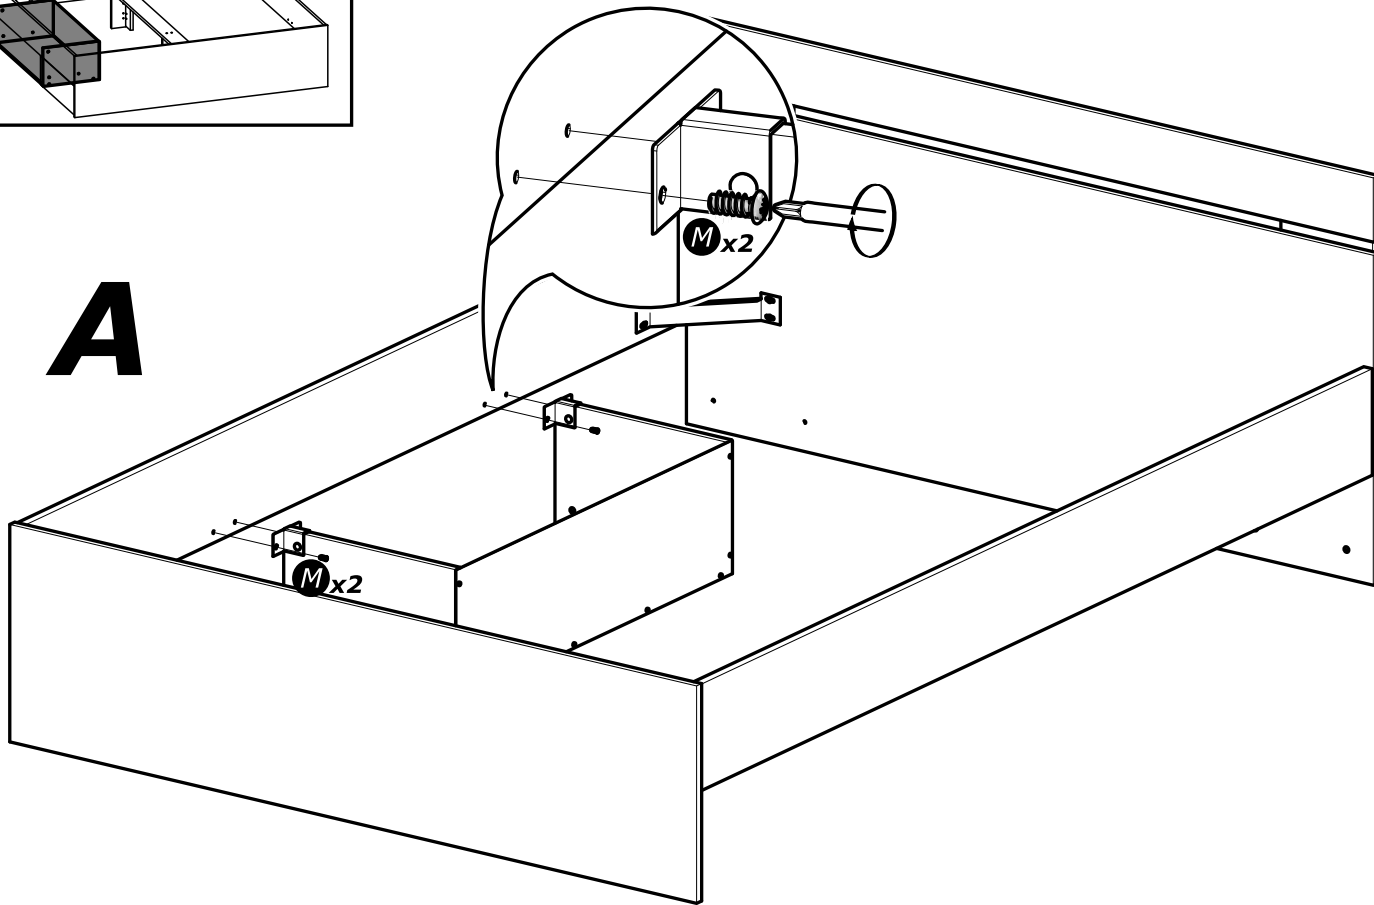

B

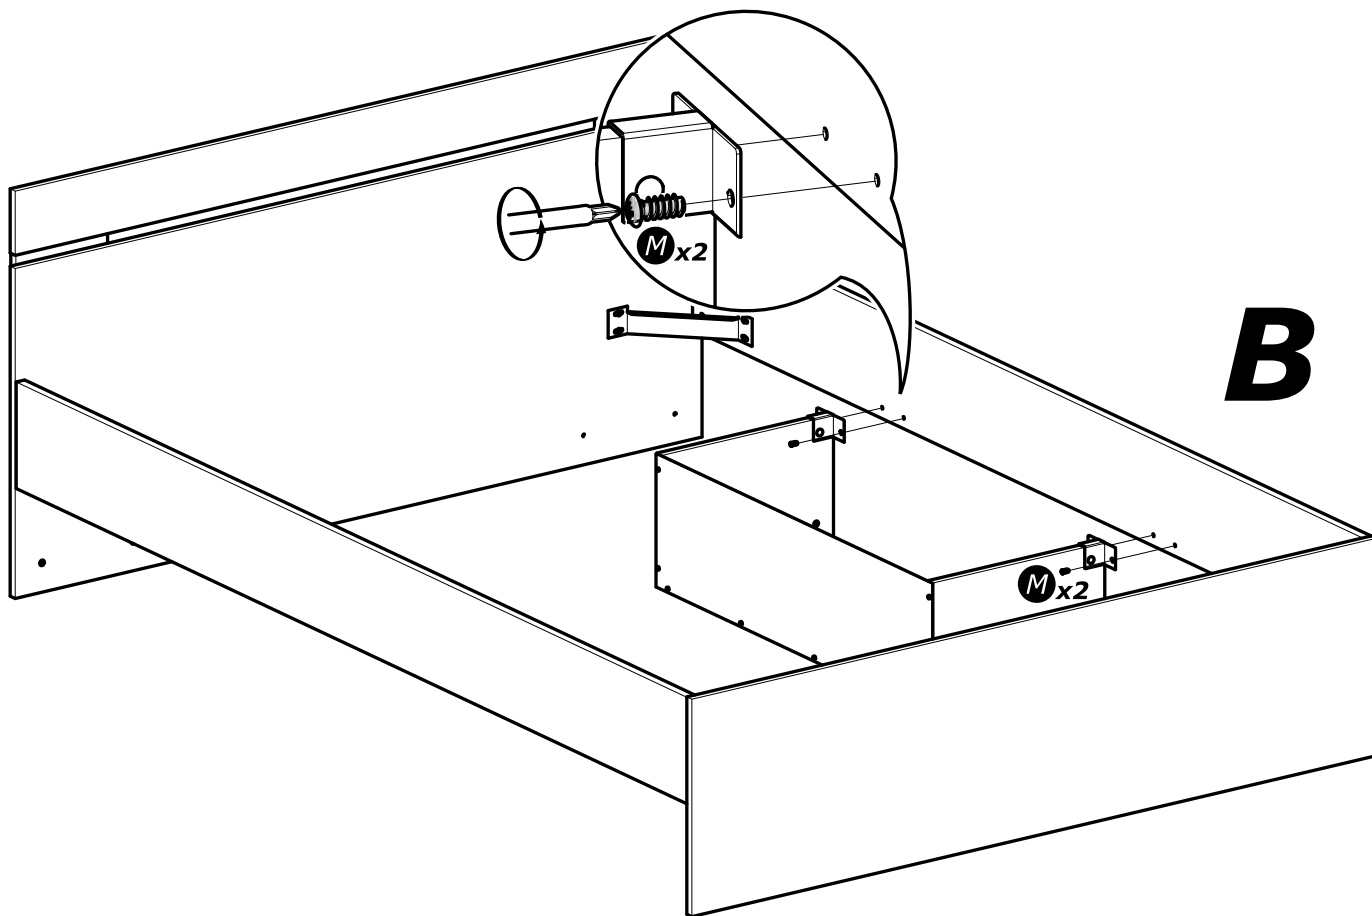

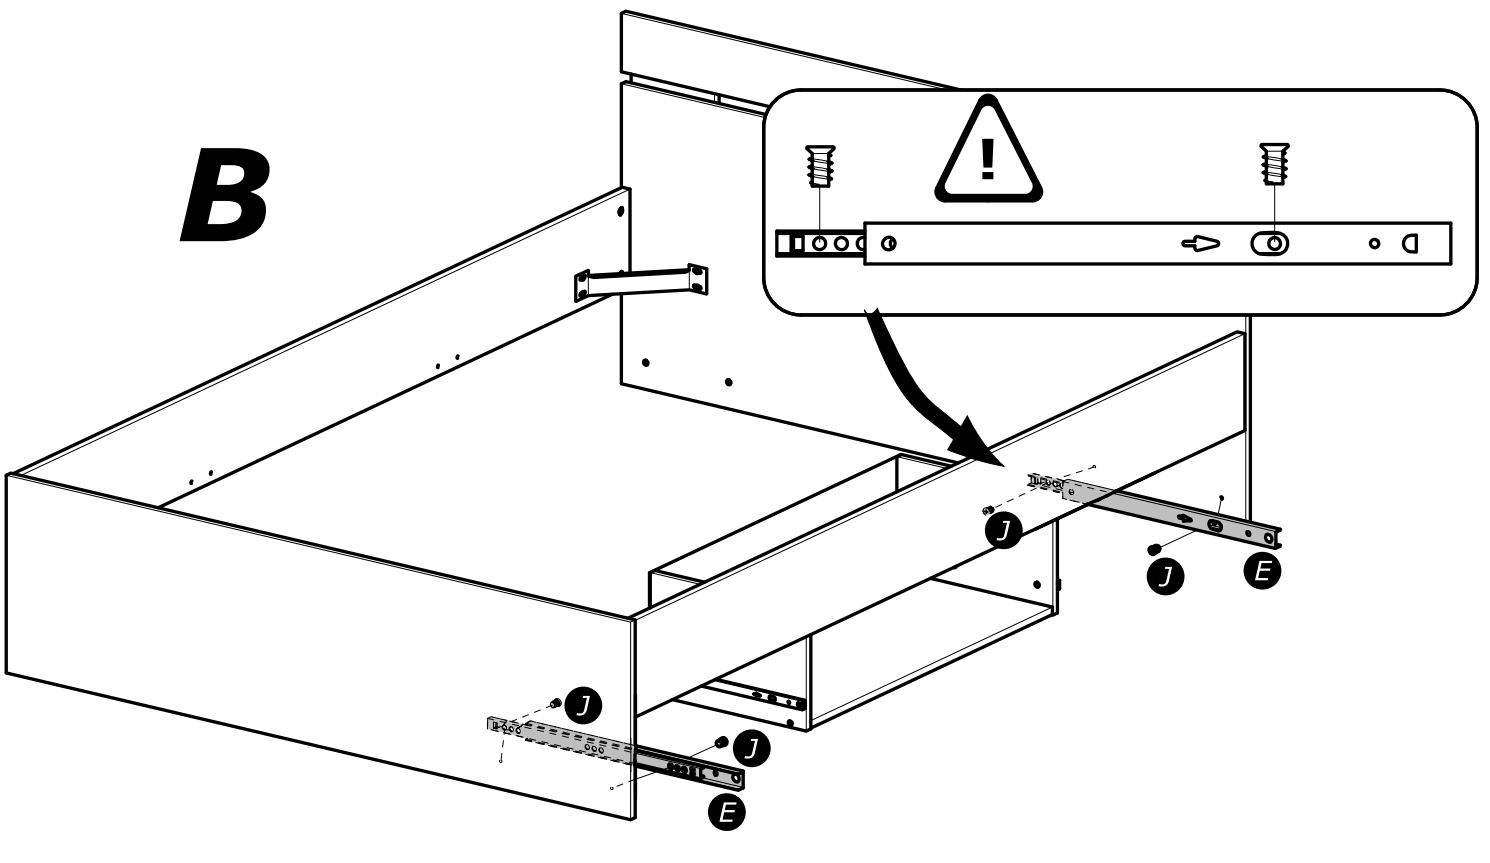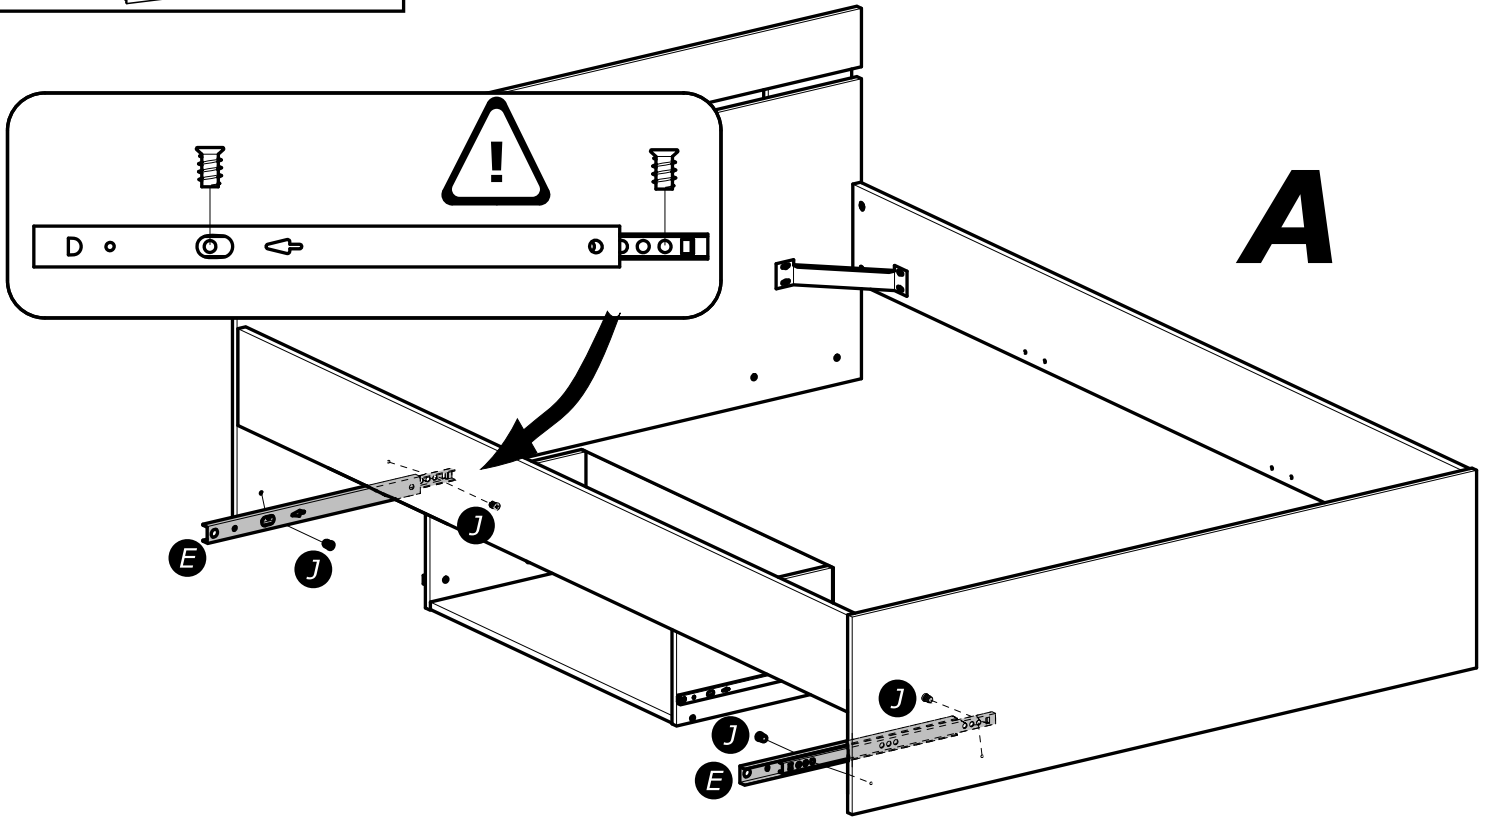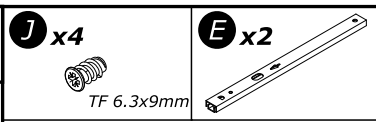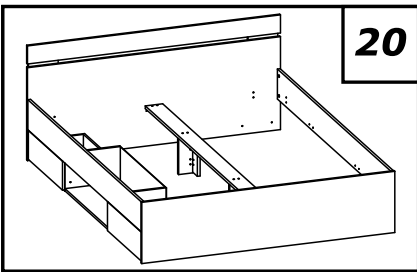

21




P x2

I x4

TR 4x25mm



www.Demeyere.fr

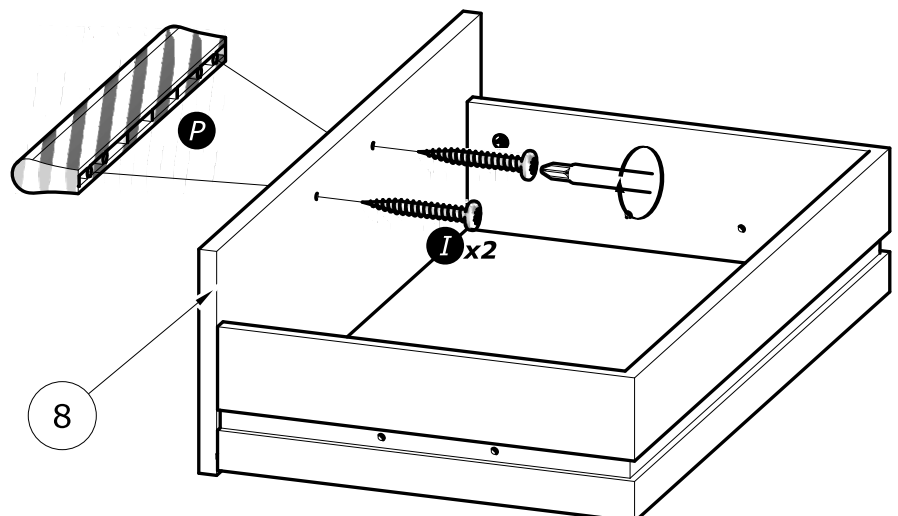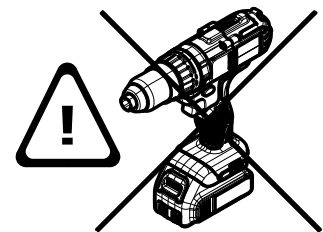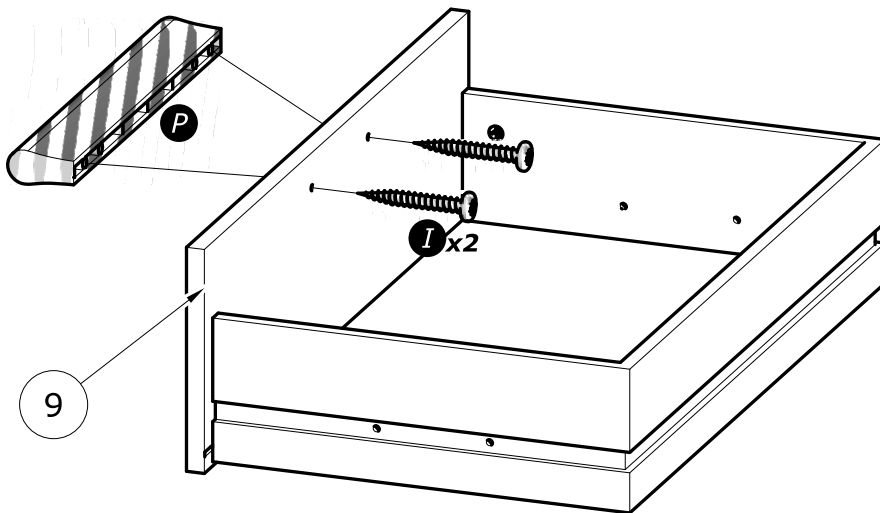

22

N x4




TR 4x9mm




www.Demeyere.fr

1°

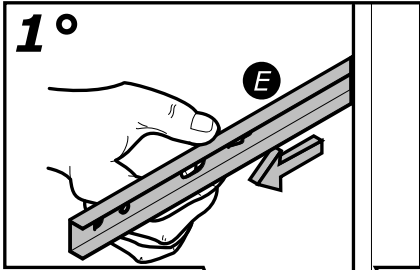


A

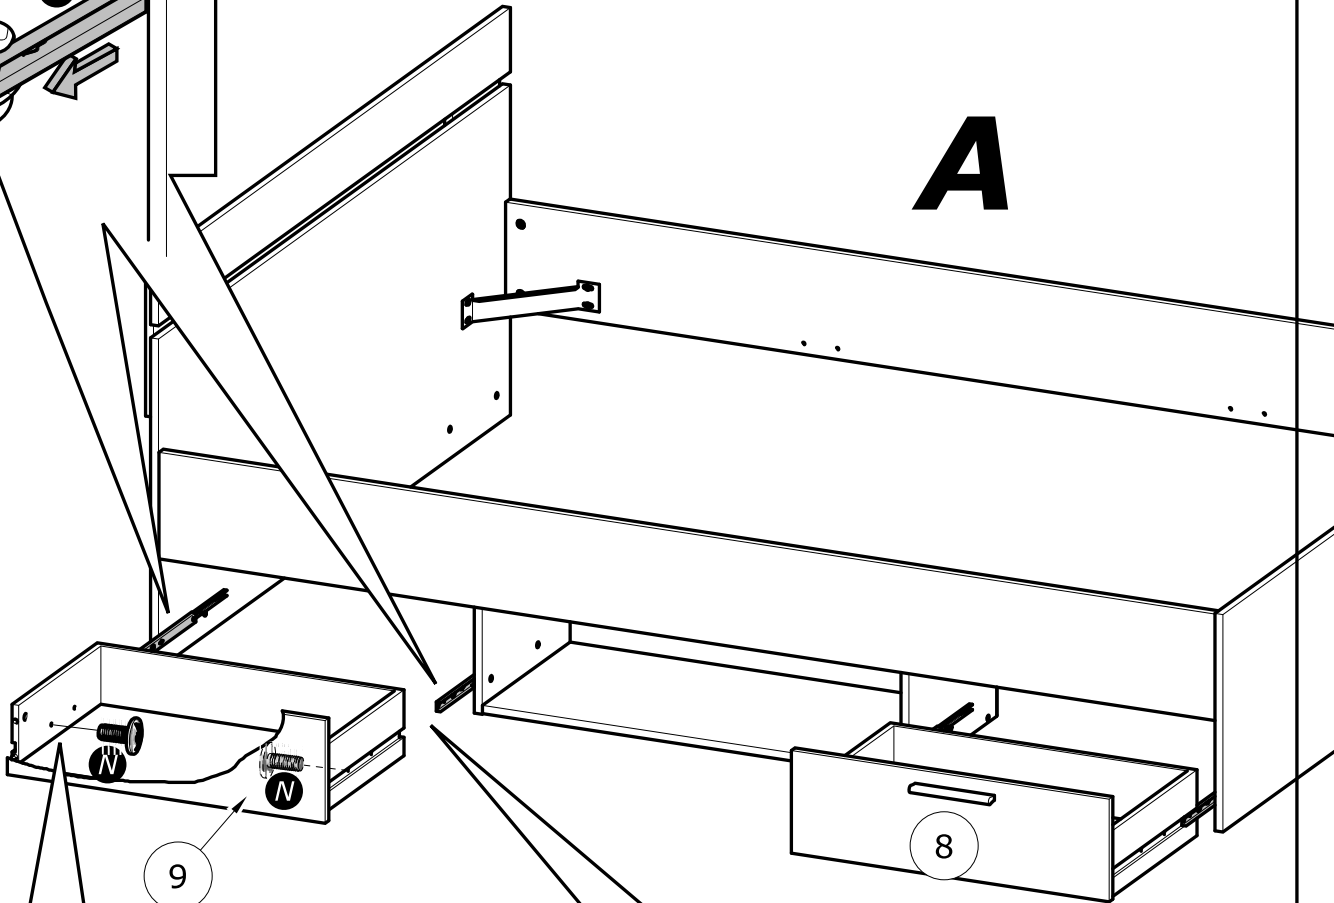


9

8


4°

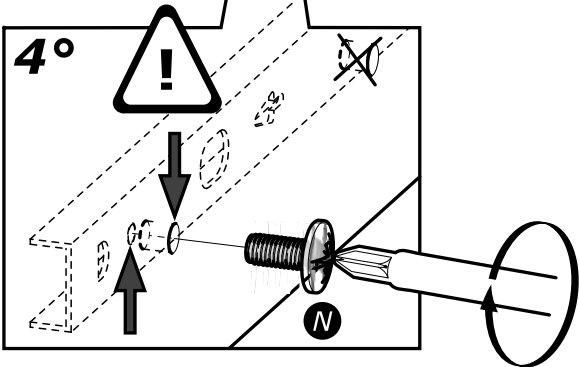

2°

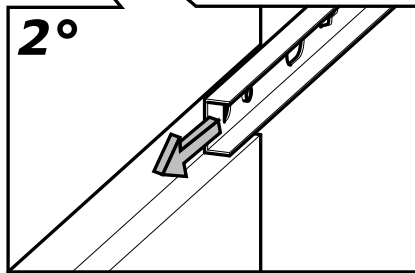

3°

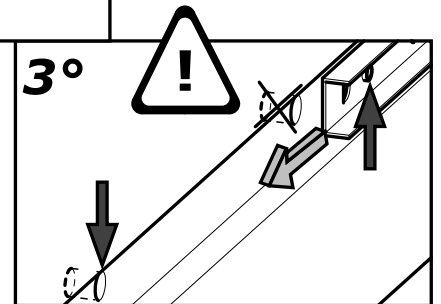

22

N x4



TR 4x9mm

B

1°

E

9

8

2°

3°


4°



N

23

S x2



M x4





TR 6.3x13mm

Q x8



Ø5mm

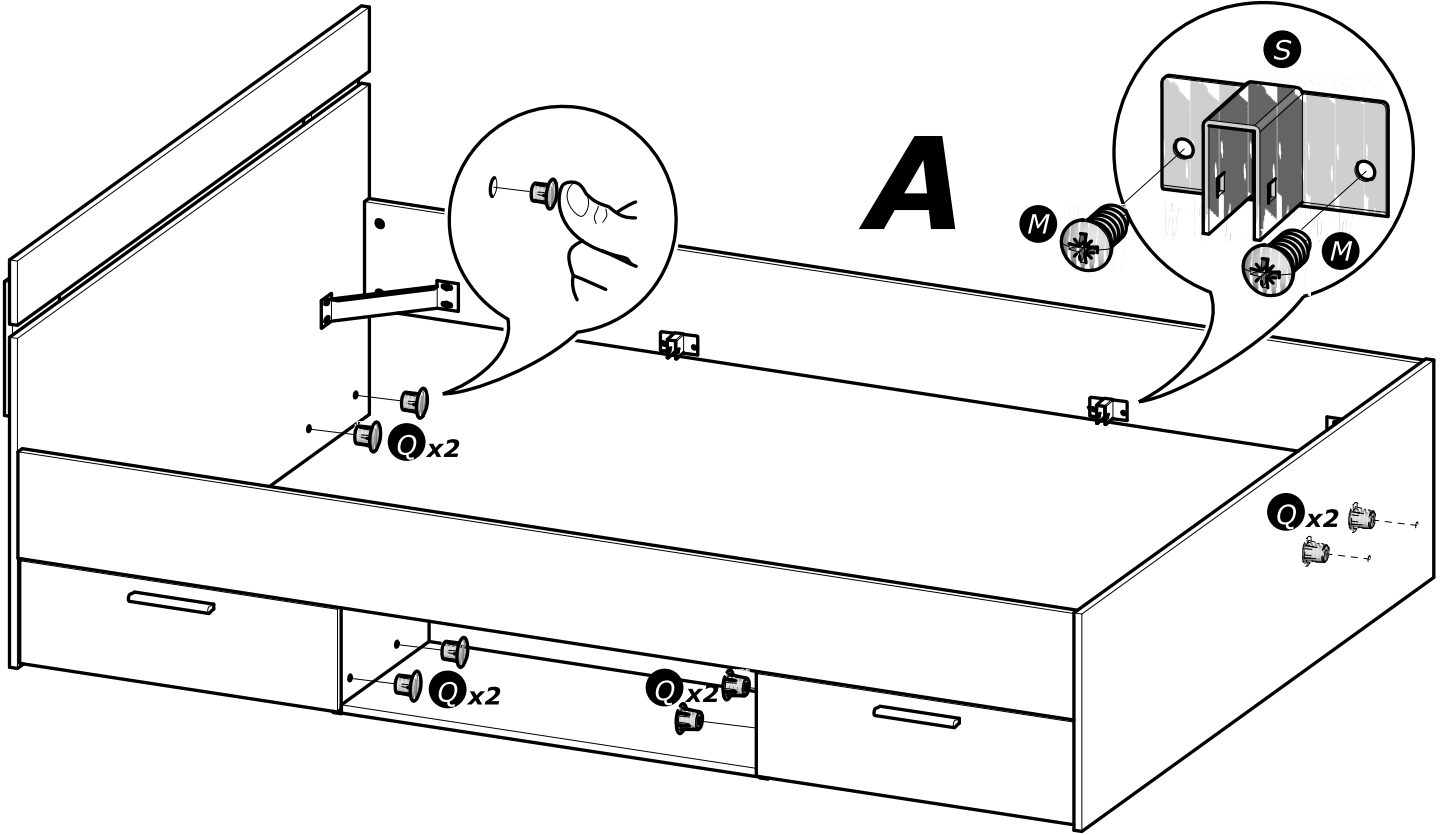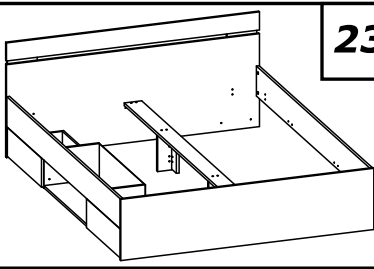


x2



A


Q x2

x2

B

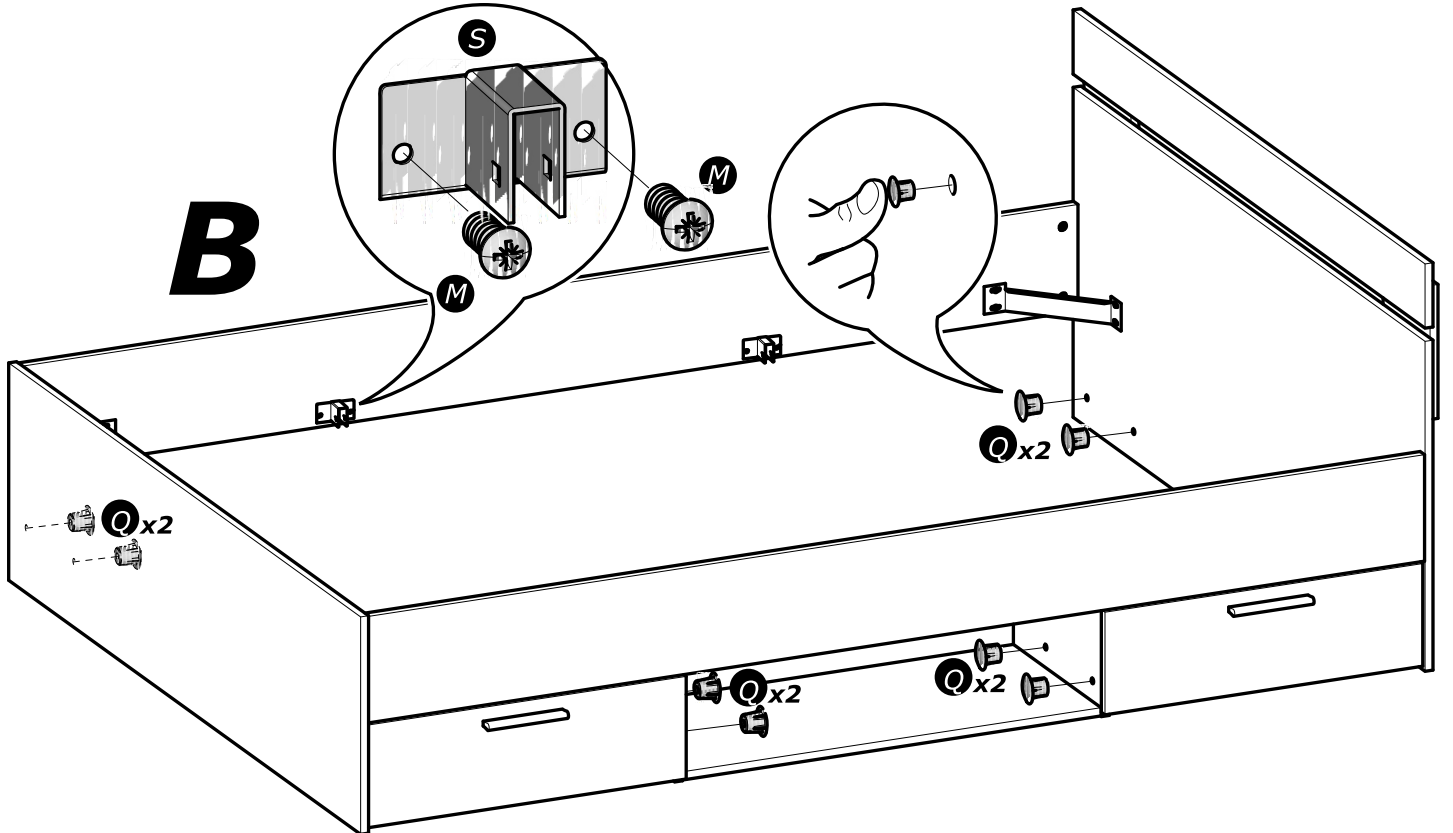

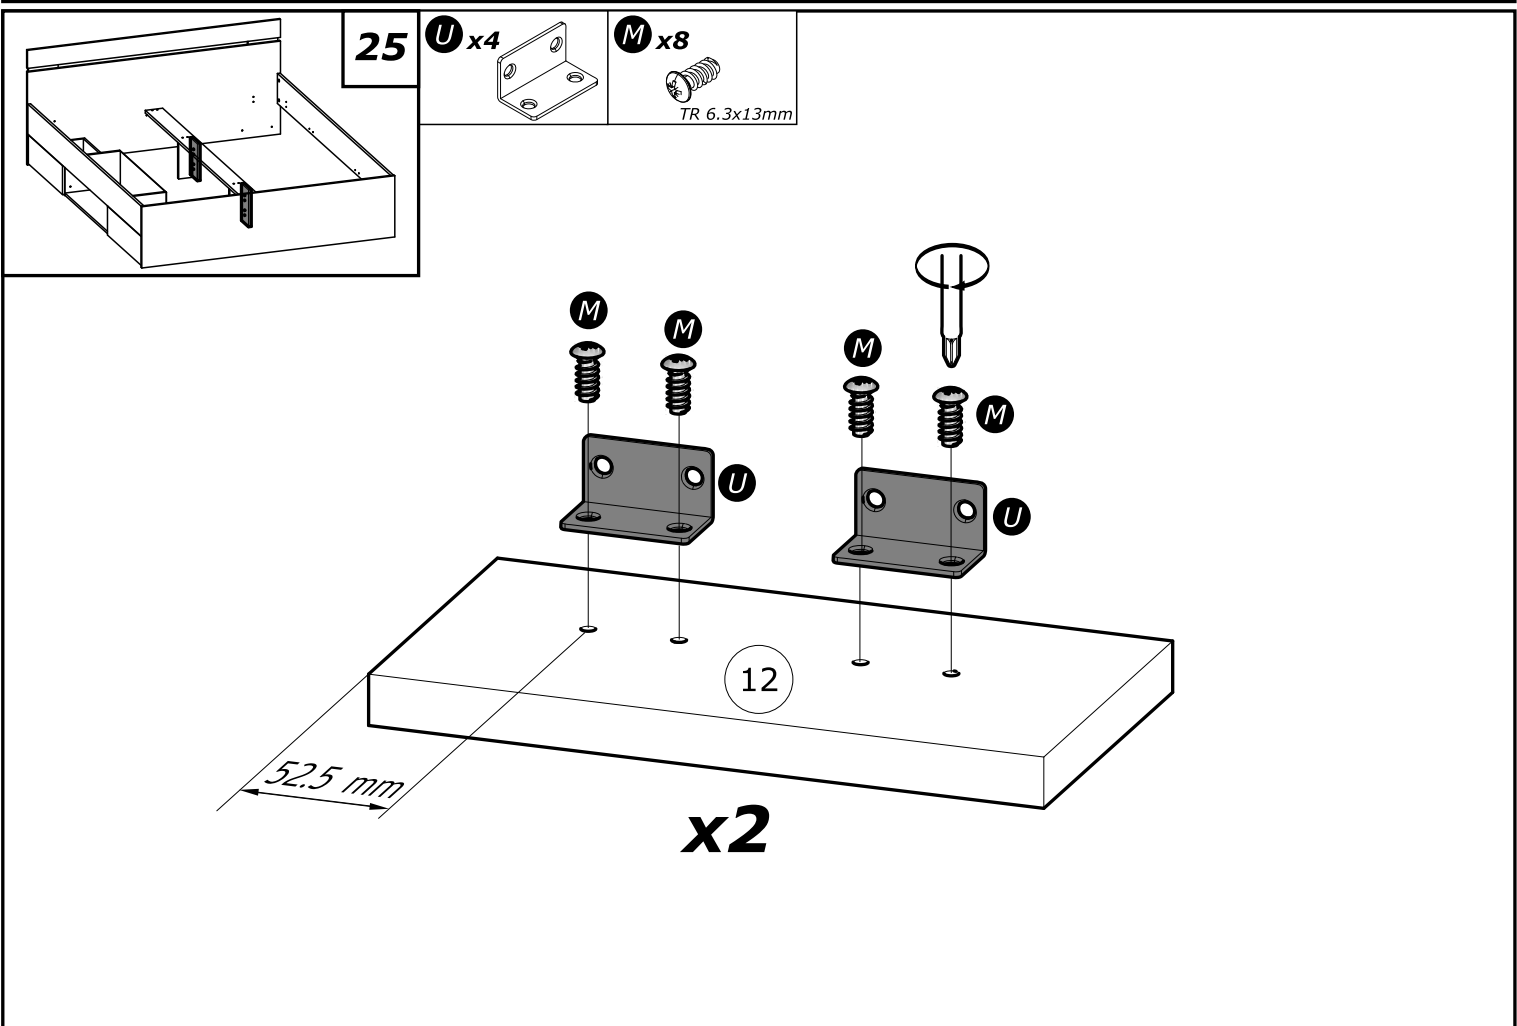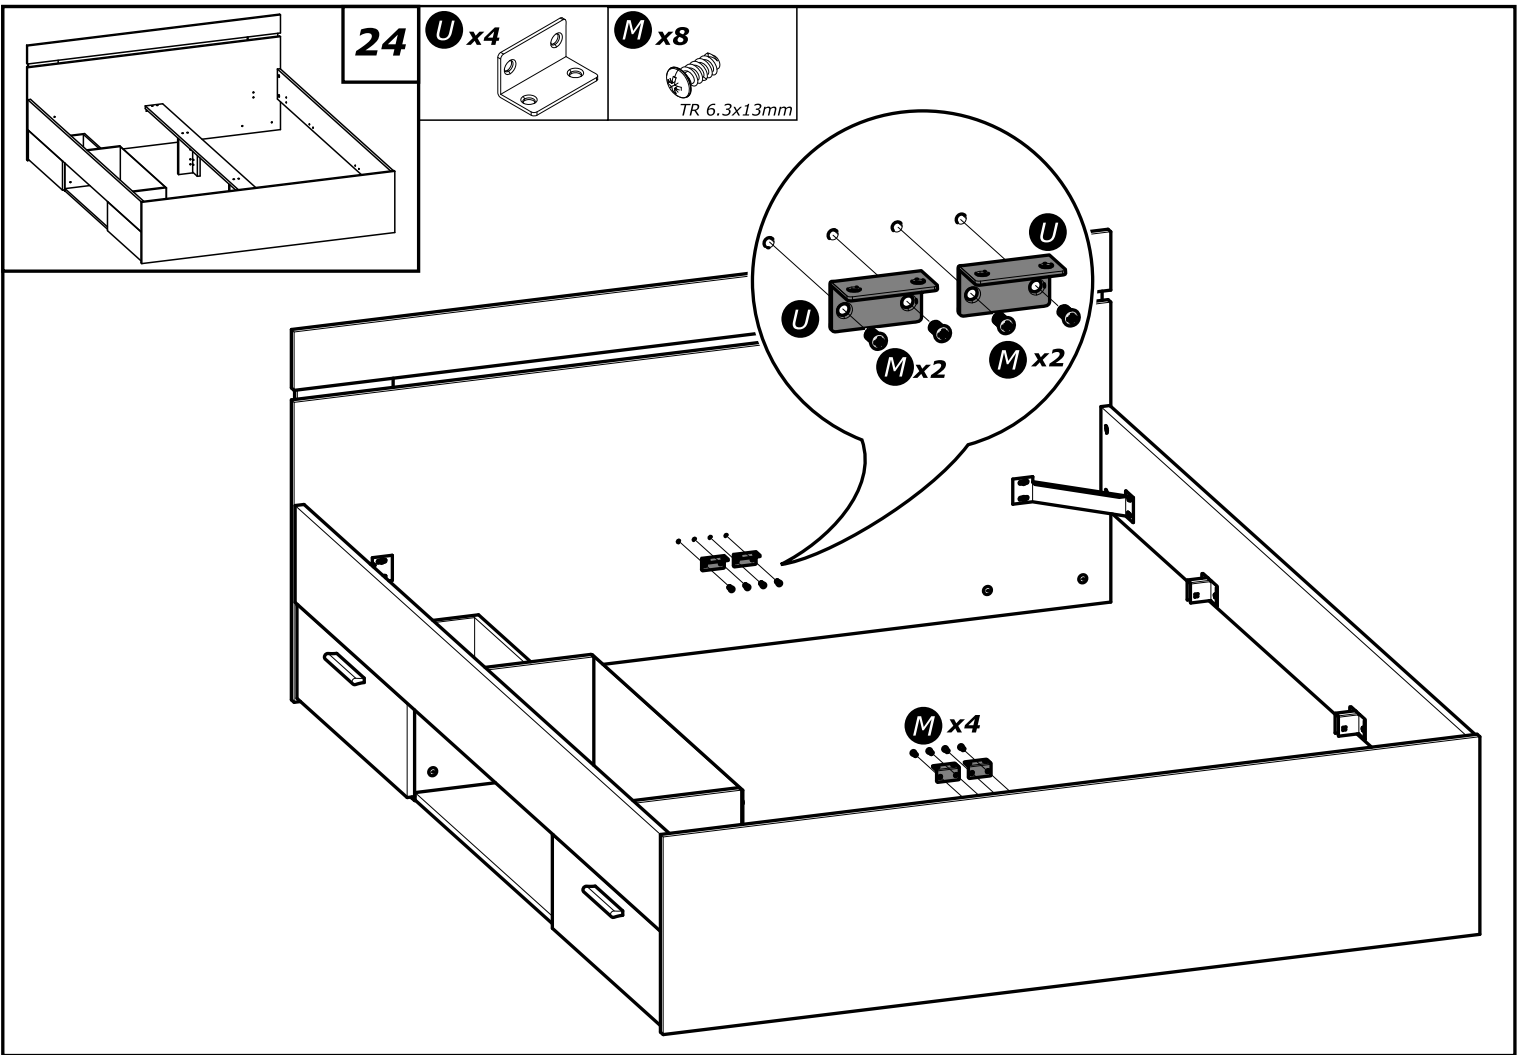

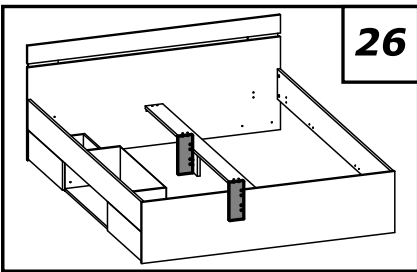


26

M x8




TR 6.3x13mm

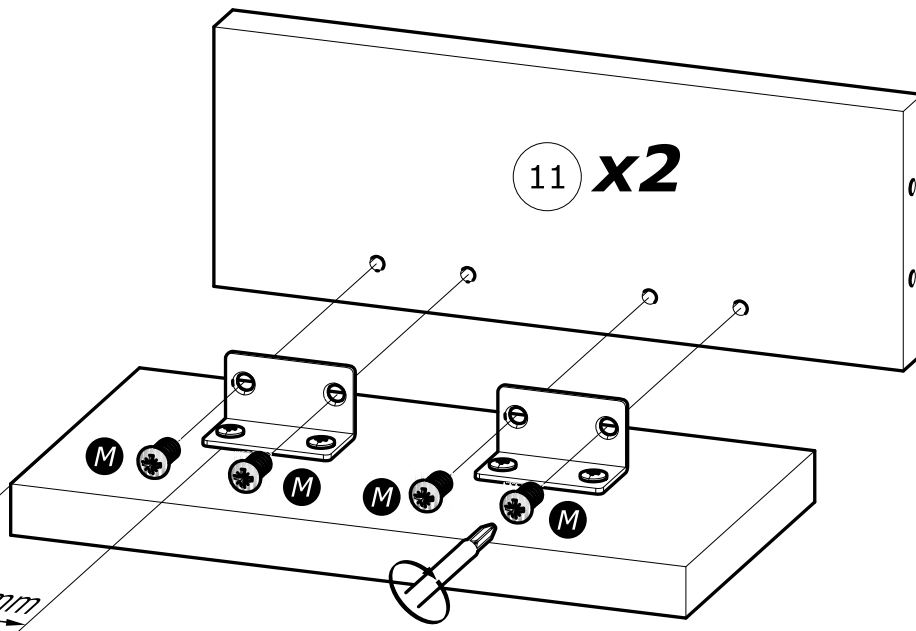


11 x2

52.5 mm

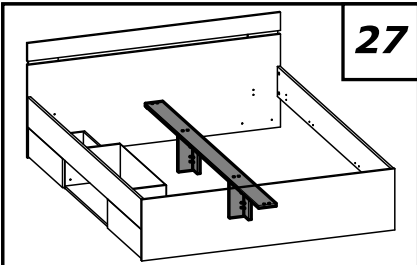



27

R x4



TF 7x50mm


D x1

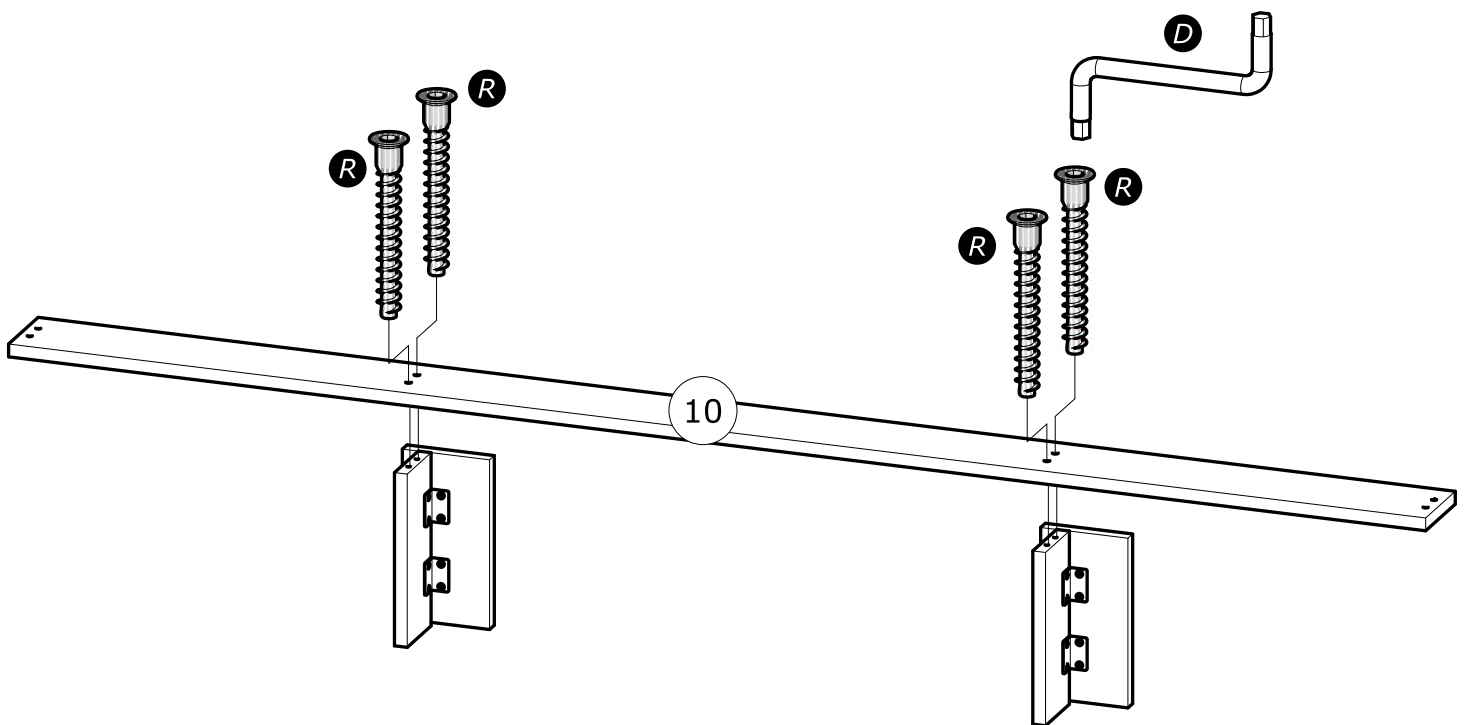



10

28

L x4



C x4

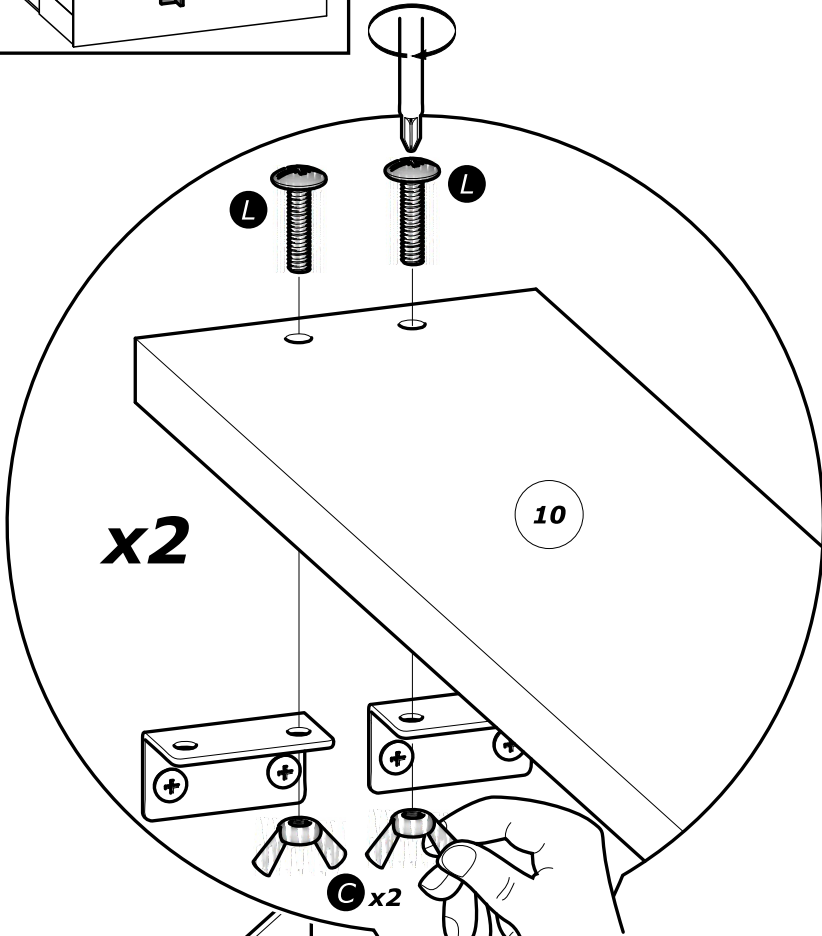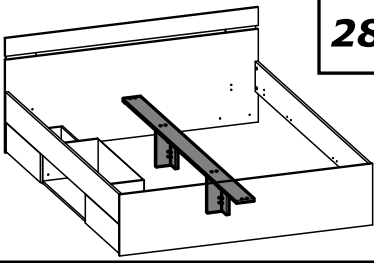





x2

10

C x2

x2 L

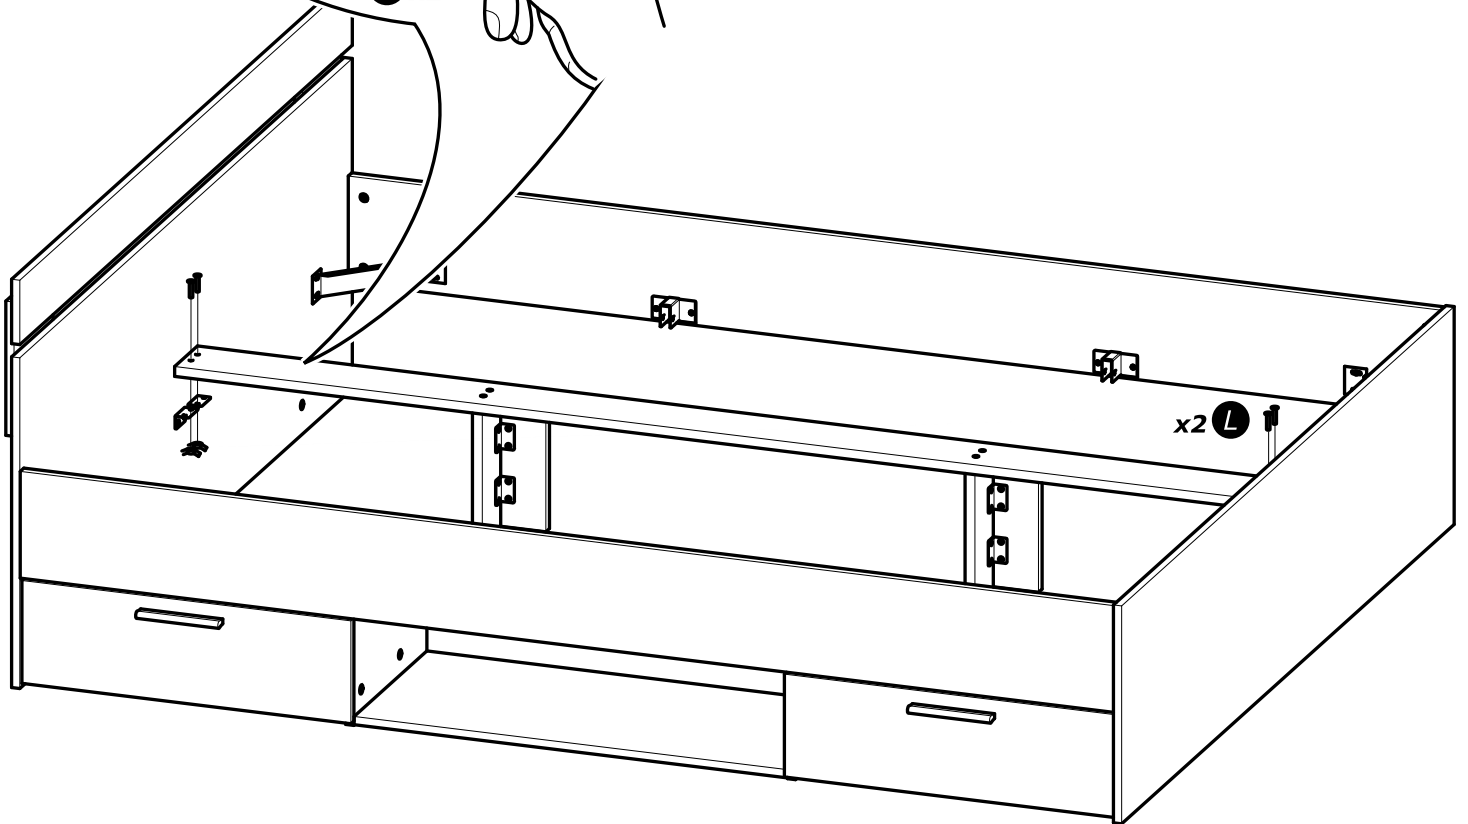

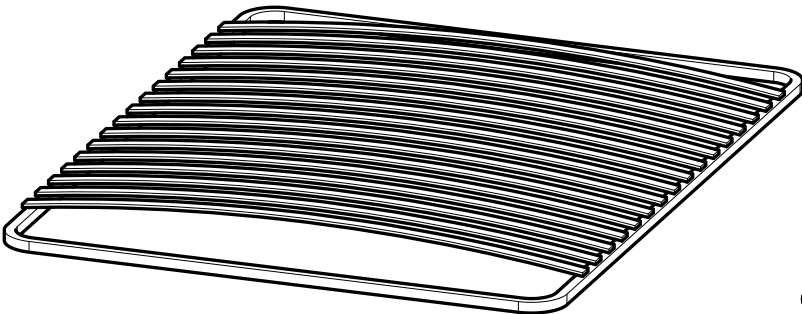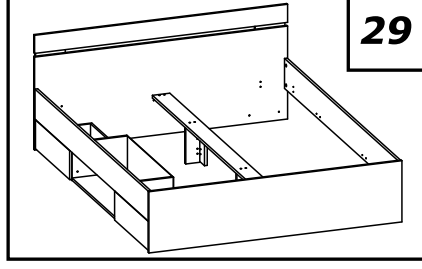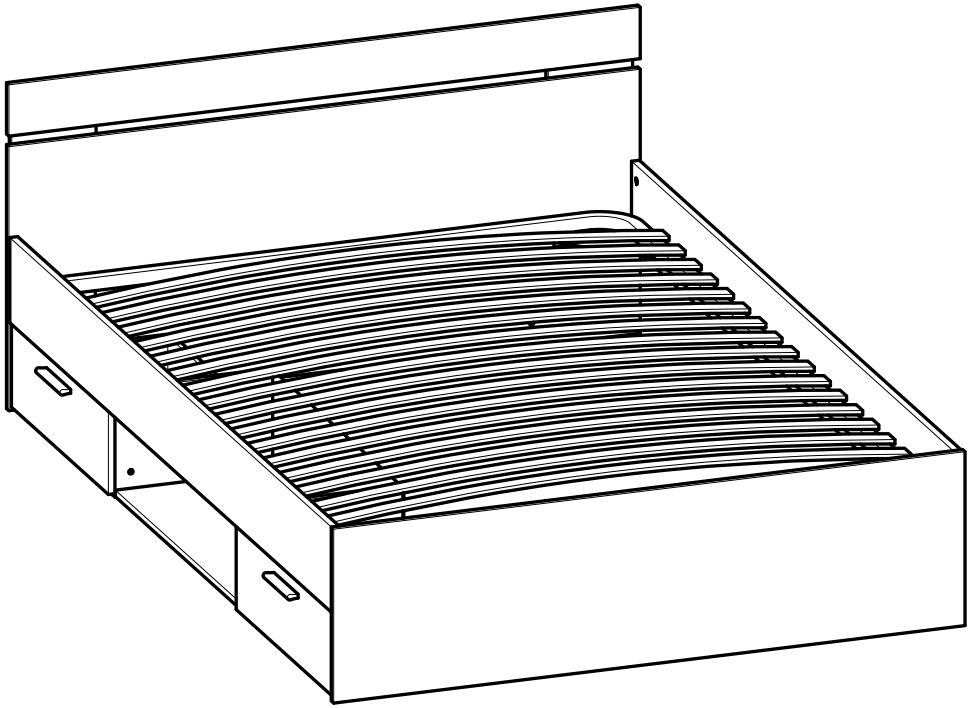

Dimensions du sommier cadre métallique à lattes


The metal frame Slatted bed base dimensions



160x200 cm

**NON INCLUS
NOT SUPPLIED**

OU / OR

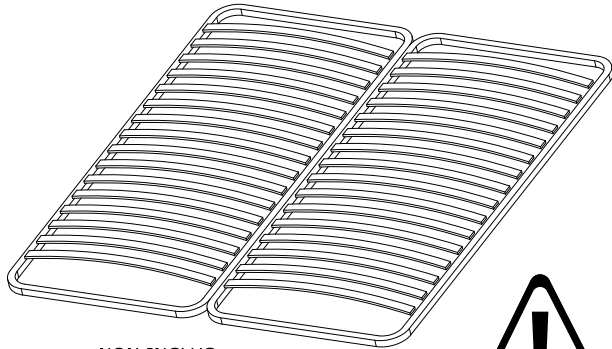

Dimensions du sommier cadre métallique à lattes

The metal frame Slatted bed base dimensions



(x2)80x200 cm

**NON INCLUS
NOT SUPPLIED**



Info tri déchets

www.quefairedemesdechets.fr